


AG-V2050

Audio/Video Surround Receiver

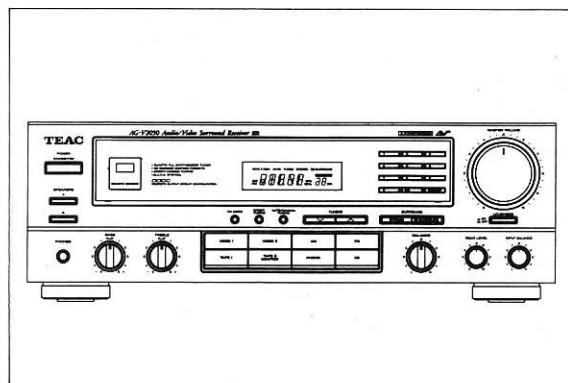

OWNER'S MANUAL	2
MANUEL DU PROPRIETAIRE	26

Thanks for buying a TEAC. Read this manual carefully to get the best performance from this unit.

Nous vous remercions pour l'achat d'un appareil TEAC.

Lire ce manuel avec attention pour obtenir les meilleures performances possibles de cet appareil.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This appliance has a serial number located on the rear panel. Please record the model number and serial number and retain them for your records.

Model number _____

Serial number _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION:

- **Read all of these instructions.**
- **Save these instructions for later use.**
- **Follow all warnings and instructions marked on the audio equipment.**

1) Read instructions — All the safety and operating instructions should be read before the product is operated.

2) Retain instructions — The safety and operating instructions should be retained for future reference.

3) Heed Warnings — All warnings on the product and in the operating instructions should be adhered to.

4) Follow instructions — All operating and use instructions should be followed.

5) Cleaning — Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6) Attachments — Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7) Water and Moisture — Do not use this product near water — for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

8) Accessories — Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9) A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



10) Ventilation — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

11) Power Sources — This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

12) Grounding or Polarization — This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

13) Power-Cord Protection — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.


14) Outdoor Antenna Grounding — If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper

grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of antenna grounding as per National Electrical Code, ANSI/NFPA 70

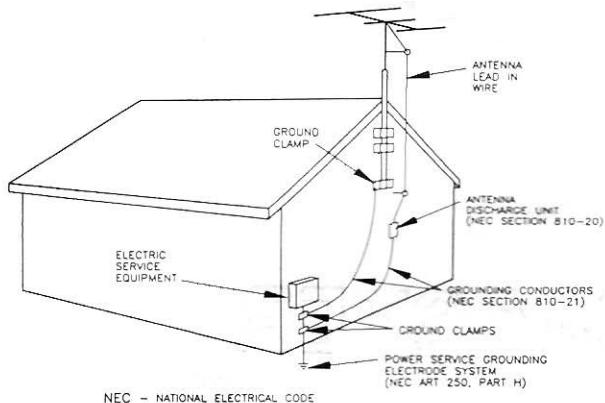

15) Lightning — For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

16) Power Lines — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17) Overloading — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

18) Object and Liquid Entry — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

19) Servicing — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20) Damage Requiring Service — Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance — this indicates a need for service.

21) Replacement Parts — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

22) Safety Check — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23) Wall or Ceiling Mounting — The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24) Heat — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

PRECAUTIONS

Placement of the Unit

As the unit incorporates a powerful amplifier, heat is radiated from the back and top of the unit; the location where the unit is installed should be well ventilated. Avoid installing where it would be exposed to high temperatures, direct sunlight, high humidity and dust. If the wiring is too long, particularly the speaker cables, it may result in degraded sound. Keep the connection cables as short as possible.

The receiver draws nominal non-operating power from the AC outlet with its POWER switch in the STANDBY position.

Obs! nätströmställaren skiljer ej hela apparaten från nätet.

For U.S.A

TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference in a residential area. This device generates and uses radio frequency energy and if not installed and used in accordance with the instructions, it may cause interference to radio or TV reception. If this unit does cause interference with TV or radio reception you can try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Plug the equipment into a different outlet so that it is not on the same circuit as the receiver.

If necessary, consult the dealer or an experienced radio/TV technician for additional suggestions.

CAUTION

Changes or modifications to this equipment not expressly approved by TEAC CORPORATION for compliance could void the user's authority to operate this equipment.

For CANADA

AC POWER CORD CONNECTION

CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

For CANADA


THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE RADIO INTERFERENCE REGULATIONS OF THE CANADIAN DEPARTMENT OF COMMUNICATIONS.

For General Export Models

VOLTAGE CONVERSION

Be sure to remove the power cord from the AC outlet before repositioning the voltage converter switch.

- Locate the voltage selector on the rear panel.
- Using a flat-bladed screwdriver, set to the appropriate 115 V or 230 V position according to your area.

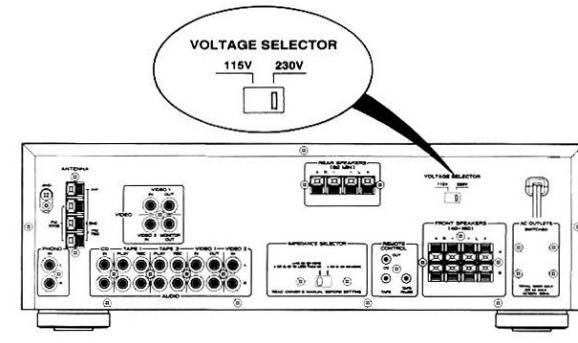

THE APPLIANCE CONFORMS WITH EEC DIRECTIVE 87/308/EEC REGARDING INTERFERENCE SUPPRESSION.

CONFORME AL D.M. 13 APRILE 1989 DIRETTIVA CEE/87/308.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	2
PRECAUTIONS	3
CONNECTIONS.....	5
System Connections.....	5
Antenna Connections.....	6
FM Antenna (U.S.A./Canada/General Export).....	6
FM Antenna (Europe).....	7
AM Antenna.....	8
Speaker Connections	9
Front Speaker IMPEDANCE SELECTOR.....	9
CONTROLS AND INDICATORS.....	10
REMOTE CONTROL UNIT	11
Batteries.....	11
Battery Installation.....	11
Battery Replacement Period.....	11
Precautions Concerning Batteries.....	11
Using the Remote Control Unit.....	11
Cautions on Use of the Remote Control Unit.....	12
OPERATIONS.....	12
Basic Operations.....	12
Audio Adjustments.....	13
Radio Reception.....	13
Auto Tuning.....	13
Manual Tuning	14
Direct Tuning	14
Preset Tuning	15
Listening to Records and Compact Discs.....	16
Playing Tapes.....	16
Recording Tapes	17
Recording a Source other than Tape.....	17
Tape Dubbing (from Tape Deck 1 to Tape Deck 2).....	17
Playing Video Sources	18
Recording with a Video Deck.....	18
Video Tape Dubbing	18
S.A.V.E. (Second Audio Source for Video Editing) SYSTEM Function	19
DOLBY SURROUND Effect	19
Speaker Installation.....	19
Playing DOLBY SURROUND Sound	20
MEMORY BACKUP FUNCTION.....	20
TEAC SYSTEM REMOTE-CONTROLLED OPERATION.....	21
Using a CD Player and Cassette Deck with a REMOTE SENSOR Window.....	21
Using a Cassette Deck without a REMOTE SENSOR Window.....	22
Buttons for the Operation of Other TEAC Components.....	23
TROUBLESHOOTING.....	24
SPECIFICATIONS.....	25


CONNECTIONS

- Do not plug the power cords of any components into AC outlets and do not turn their POWER switches on until all connections have been performed.


System Connections

— : Audio signal
- - - : Video signal

Refer to "Antenna Connections" on pages 6 - 8.

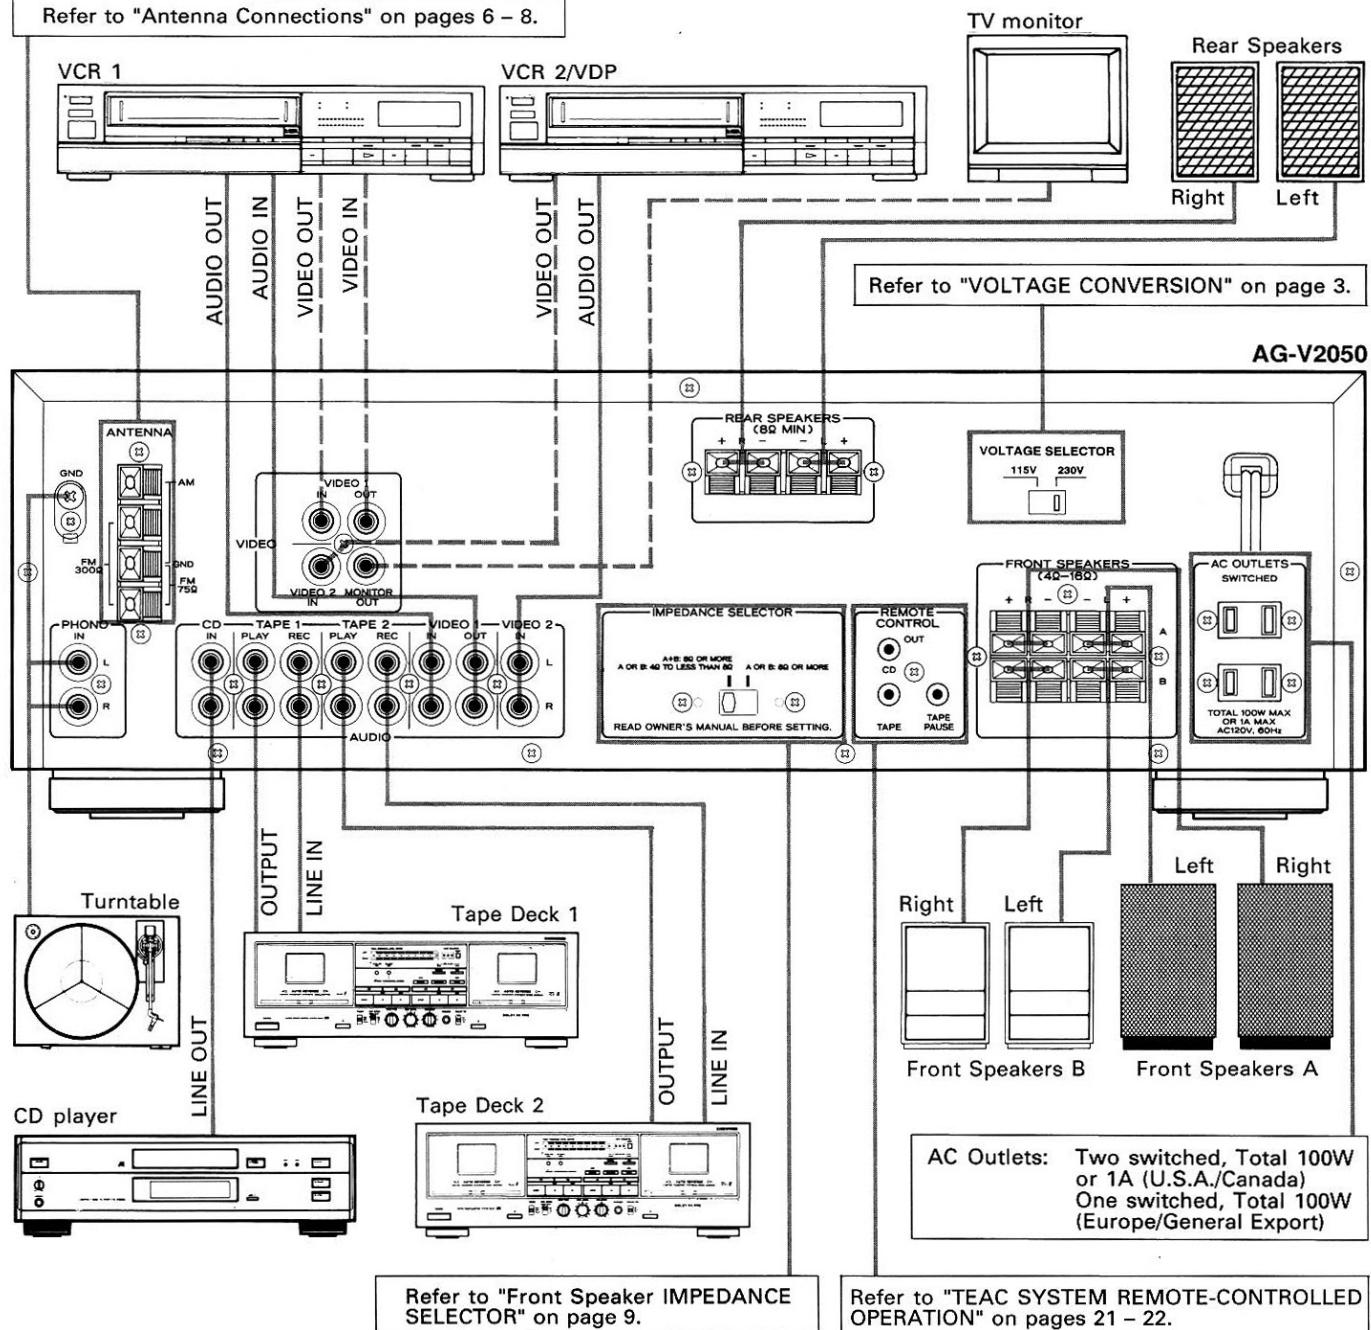

Audio connection cords

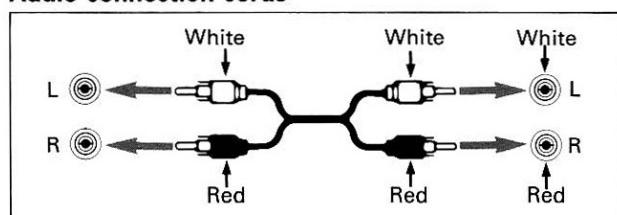


Antenna Connections

FM Antenna (U.S.A./Canada/General Export)


In an area with strong FM signals, the "T"-type FM antenna provided is sufficient. Extend this in the shape of a T and connect the two wires at the base of the T to the antenna terminals, as shown. For details of how to connect the antenna wires to the terminals, see the illustration.

Extend the top of the T and fix with thumb tacks, etc. to a wall or window frame, for the best possible reception.

"T"-type FM Antenna (300Ω)(provided)

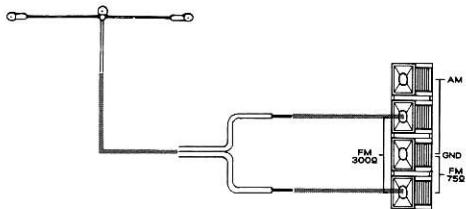

How to connect antenna

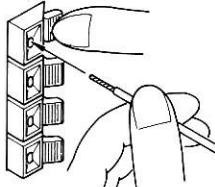


Press down the lever and insert the stripped end of the wire into the correct hole then move the lever up so that the wire is held securely.

In an area where FM signals are weak, it will be necessary to use a 75-ohm unbalanced type outdoor FM antenna. Generally, a 3-element antenna will be sufficient; if you live in an area where the FM signals are particularly weak, it may be necessary to use one with 5 or more elements.

75-ohm antennas use a coaxial cable and should be connected as follows: first strip the covering of the cable, then twist the wire shielding so the inner core and shielding can be connected as shown.


Outdoor FM Antenna (75Ω)

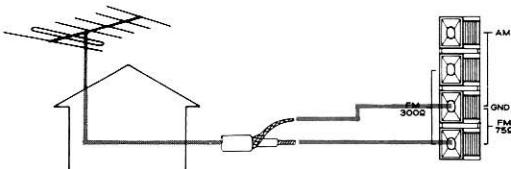


FM Antenna (Europe)

Models for Europe are designed for the connection of a 75-ohm unbalanced type outdoor FM antenna using the matching transformer provided as shown. Generally, a 3-element antenna will be sufficient; if you live in an area where the FM signals are particularly weak, it may be necessary to use one with 5 or more elements.

Connect the coaxial cable of the antenna to the matching transformer as shown. After completing connection, plug the transformer into the "FM 75Ω" socket.

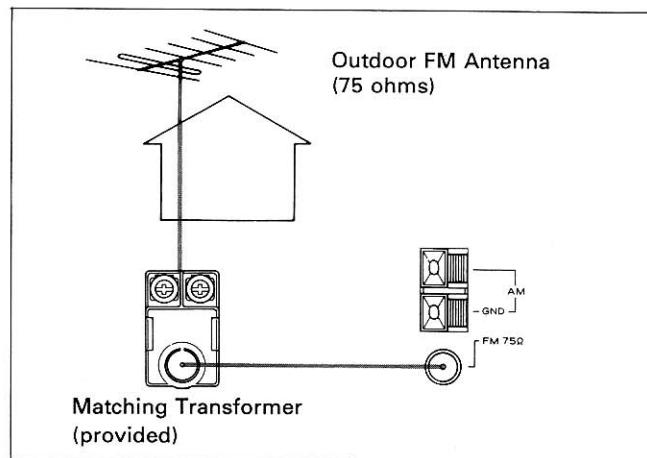


If you live reasonably close to a transmitter and want to use the "T"-type FM antenna provided, you will have to connect it to the matching transformer provided. Connect the wires at the base of the T to the matching transformer's terminals as shown. Plug the transformer into the "FM 75Ω" socket, extend the top of the T and fix to a window frame or wall with drawing pins, etc. where reception is best.

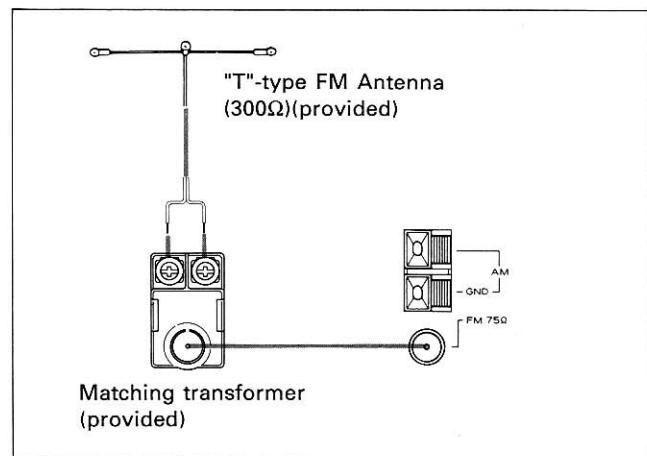

How to connect a coaxial cable to the matching transformer


- ① Strip the cable as shown below.

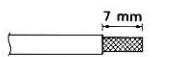

Strip off outer covering.




Bend back outer shielding mesh.

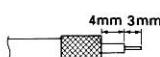


Strip core wire.

- ② Remove the cover by pulling the side-pieces out with your finger nail.

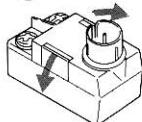

- ③ Insert the core wire into the slit in the metal tab as shown in A. Crimp the metal claws with pliers, etc. so they hold the shielding mesh portion. Replace the cover.

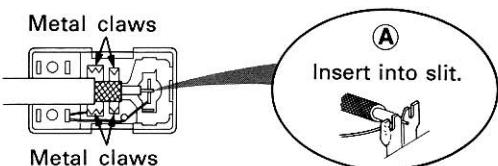

AM Antenna

■ AM Loop Antenna


A high-performance AM loop antenna is provided with the receiver and this is sufficient for good reception in most areas.

Attach the loop antenna to the snap-in hinge on the supplied loop antenna stand then connect its wires to the AM antenna terminals as shown. For details of connecting antenna wires to the terminals, see "How to connect antenna" on page 6.

Place the antenna stand on a shelf, etc. or attach it to a wall, etc. with screws so that it is as far away as possible from the entire system, speaker cords and the power cord to prevent noise.

As shown, turn the loop antenna for the best reception.

There is a hole in the loop antenna and this can be used to suspend the antenna from a screw in a window frame, etc.

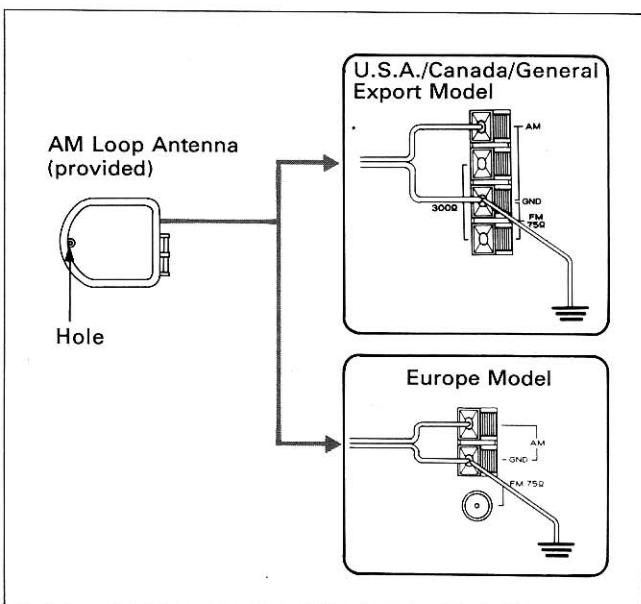


■ AM Outdoor Antenna

If the AM loop antenna provided does not provide sufficiently good reception (because you are too far from the transmitter or in a concrete building, etc.), it may be necessary to use an outdoor AM antenna.


Use an insulated wire more than 15 ft (5 m) long, strip one end, and connect this to the terminal shown. The antenna wire should be strung outdoors or indoors near a window. For better reception, connect the GND terminal to a reliable ground.

Note: Even when using an outdoor AM antenna, do not disconnect the AM loop antenna.

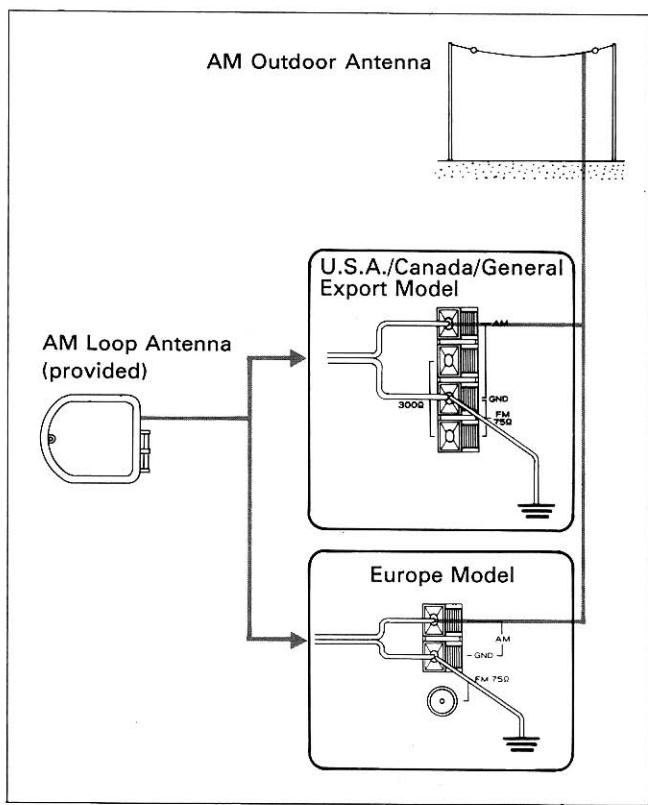


Setting up AM Loop Antenna

On a shelf, etc.

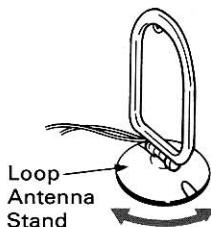

Find the direction in which reception is best.

On a wall, etc.

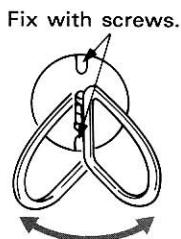

Find the direction in which reception is best.


Speaker Connections

Cautions:

- To avoid damaging the speakers by inputting a sudden high level signal, before connecting the speakers, be sure to switch the power off.
- Be sure to use front speakers having an impedance of 4 to 16 ohms and rear speakers having an impedance of 8 ohms or more.


Connect the main pair of the front speakers to the FRONT SPEAKERS A terminals, and connect the second pair to the FRONT SPEAKERS B terminals. To enjoy the Dolby Surround effect, connect the rear speakers to the REAR SPEAKERS terminals.

Connect the speaker cords to the speaker terminals as shown in the following illustration.

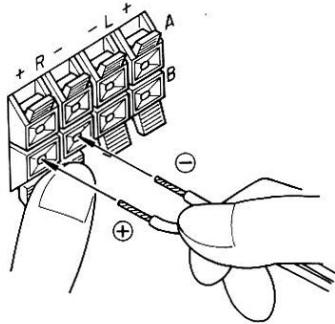

* Press the lever, insert the stripped end of the cord, then release the lever so that the cord is held securely.

Front Speaker IMPEDANCE SELECTOR

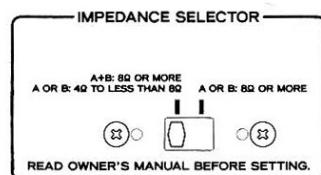

Cautions:

1. Before setting this selector, be sure to switch the power off.
2. Together with this section, also refer to "SPEAKERS Select Buttons" on page 13.

After connecting front speakers, set the IMPEDANCE SELECTOR switch according to the table below.

When using speakers A or speakers B separately.



Speaker impedance	Selector position
4 Ω, 6 Ω	A+B: 8Ω OR MORE A OR B: 4Ω TO LESS THAN 8Ω A OR B: 8Ω OR MORE
8 Ω, 16 Ω	A+B: 8Ω OR MORE A OR B: 4Ω TO LESS THAN 8Ω A OR B: 8Ω OR MORE

When using speakers A and speakers B together.


Speaker impedance	Selector position
8 Ω, 16 Ω	A+B: 8Ω OR MORE A OR B: 4Ω TO LESS THAN 8Ω A OR B: 8Ω OR MORE

CONTROLS AND INDICATORS

■ Front Panel

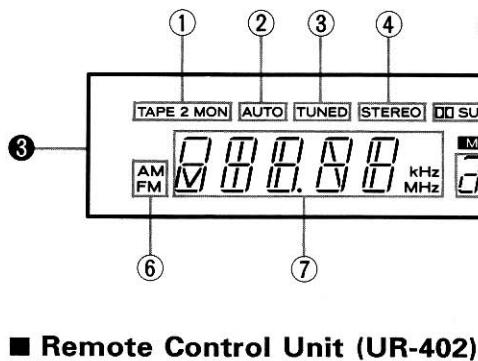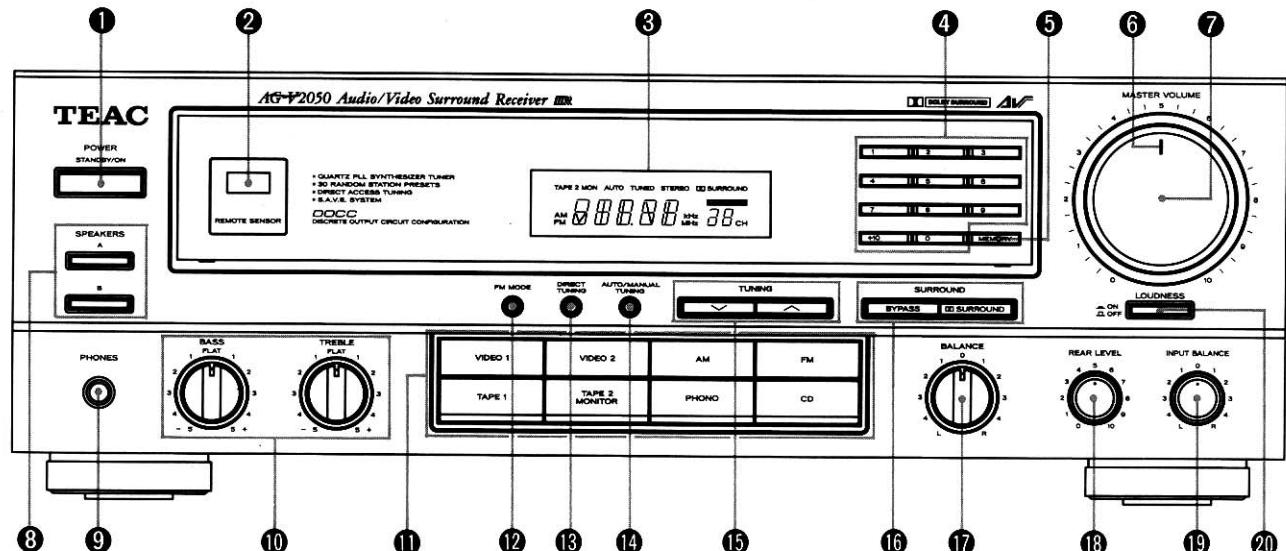

■ Remote Control Unit (UR-402)

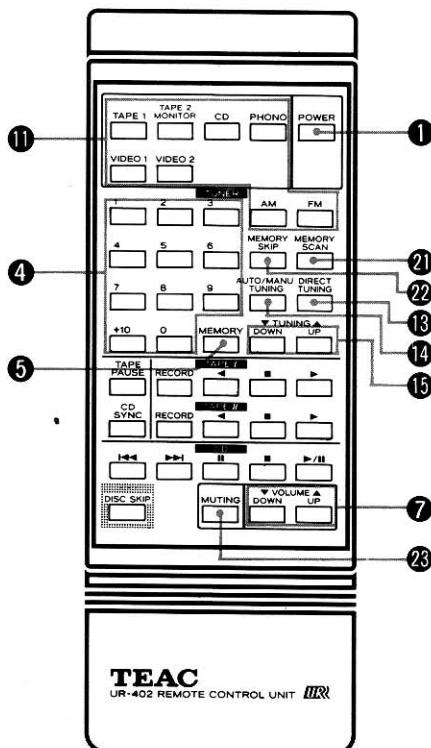

- ① POWER Button
- ② REMOTE SENSOR Window
- ③ Multi-Function Display Window
- ④ TAPE 2 MONITOR Indicator
- ⑤ AUTO Indicator
- ⑥ TUNED Indicator
- ⑦ STEREO Indicator
- ⑧ DOLBY SURROUND Indicator
- ⑨ Band Indicator
- ⑩ Source/Frequency Display
- ⑪ Preset Channel Display
- ⑫ MEMORY Indicator
- ⑬ Numeric Keys
- ⑭ MEMORY Button
- ⑮ MASTER VOLUME Level Indicator
- ⑯ MASTER VOLUME Control (VOLUME DOWN/UP Buttons)
- ⑰ SPEAKERS Select Buttons
- ⑱ PHONES Jack
- ⑲ BASS and TREBLE Controls
- ⑳ Source Selector Buttons
- ㉑ FM MODE Button
- ㉒ DIRECT TUNING Button
- ㉓ AUTO/MANUAL TUNING Button
- ㉔ TUNING DOWN/UP Buttons
- ㉕ SURROUND (BYPASS/□ SURROUND) Buttons
- ㉖ BALANCE Control
- ㉗ REAR LEVEL Control
- ㉘ INPUT BALANCE Control
- ㉙ LOUDNESS Button
- ㉚ MEMORY SCAN Button (Remote Control Only)
- ㉛ MEMORY SKIP Button (Remote Control Only)
- ㉜ MUTING Button (Remote Control Only)

* For remote control unit buttons which are not numbered, refer to page 23.

REMOTE CONTROL UNIT

Using the provided UR-402 Remote Control Unit, the AG-V2050 Receiver and some other TEAC components used with it can be controlled from your listening position.


Remote control of other TEAC components using the UR-402 is explained later, on page 21.

Batteries


Battery Installation

1. Remove the battery compartment cover of the remote control, referring to the diagram below.

Push tab ① in the direction of the arrow, then lift cover ② to remove it.

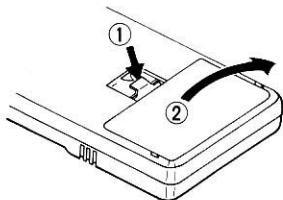


2. Insert two "SUM-3", "AA" or "R06" batteries. Make sure the batteries are installed with the correct polarities, following the markings in the battery compartment and as shown below.

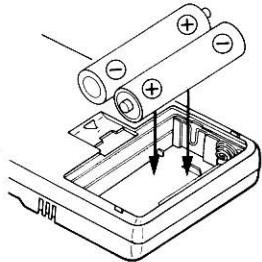

3. Replace the cover.

Insert two claws ① into the slots, then press the cover in the direction of arrow ② until it clicks into place.

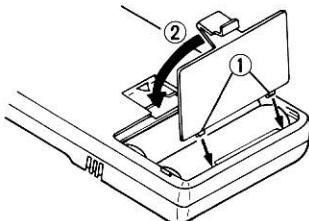

Battery Replacement Period


If the distance from the receiver within which correct operation is possible becomes shorter, it indicates that the batteries are nearly exhausted, in which case they should both be replaced.

Precautions Concerning Batteries

- Be sure to insert the batteries with the correct (+) and (-) polarities, as shown in the battery compartment.
- Do not use an old battery and a new battery at the same time.
- Use batteries of the same type. Never use batteries of different types together, even if they are the same shape.
- Both rechargeable and non-rechargeable batteries can be used. Refer to the cautions on their labels before use.
- Do not disassemble batteries and never dispose of old batteries by throwing them in a fire as they could explode.

Using the Remote Control Unit

To use the UR-402, point it at the REMOTE SENSOR window of the receiver (or other TEAC component) within the range shown.

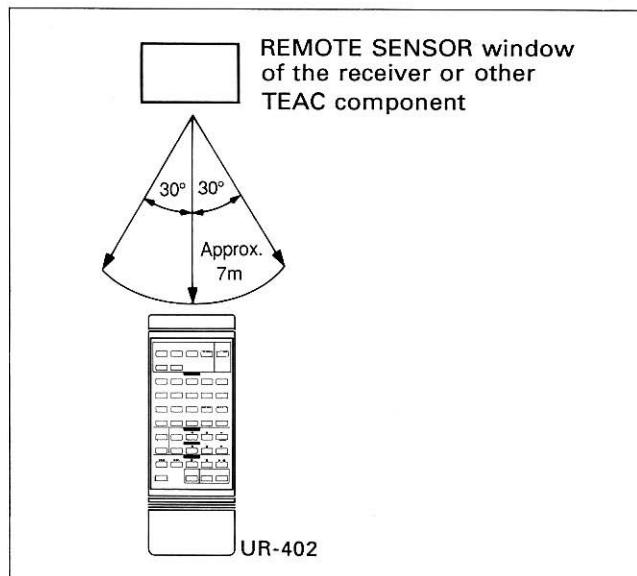

Certain buttons on the UR-402 and on the front panel of the AG-V2050 have the same or similar functions and have the same reference numbers. These are shown on page 10.

Buttons without numbers are for the operation of other TEAC components. For these buttons, refer to page 23.

OPERATIONS

Cautions on Use of the Remote Control Unit


- Even when the remote control unit is used within the range shown, if there is any obstacle between it and the receiver, operation will be impossible.
- If you have other appliances controlled by infrared signals installed in the same room as your AG-V2050, these could be operated erroneously by signals from the remote control. (TEAC cannot take responsibility for any incidental or consequential damage this may cause.) Conversely, their remote controls could cause the AG-V2050 to operate erroneously.
- Be careful not to place books, etc. on the remote control unit. These could press its buttons in which case its batteries would become exhausted more quickly.
- When the remote control unit is not to be used for more than a month or so, remove the batteries so they cannot leak and cause damage. If they do leak, clean the battery compartment by wiping with a clean tissue, then insert new batteries.

The following instructions apply throughout the "OPERATIONS" sections unless otherwise noted.

- To simplify explanations, they use the names of buttons and controls on the front panel, making no mention of the use of the remote control unit.
- Be sure the TAPE 2 MONITOR button is set to OFF (the TAPE 2 MON indicator will not appear in the display).


Hereafter, this instruction will not be repeated.

Basic Operations

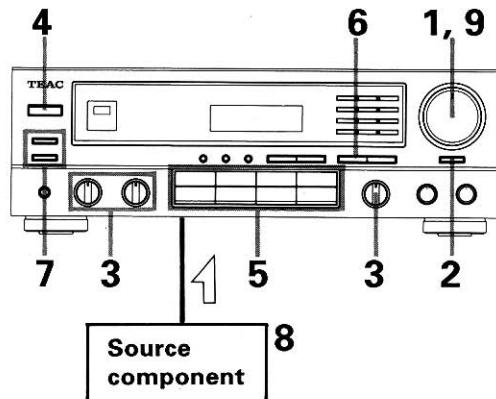

1. Set the MASTER VOLUME control to "0". This is to protect the speakers from a sudden high-level signal.
2. Set the LOUDNESS button to the OFF position.
3. Set the BASS, TREBLE and BALANCE controls to their center (click) positions.
4. Press the POWER button to turn on the power.
5. Select the required source by pressing one of the source selector buttons.
To listen to a source other than tape deck 2, check that the TAPE 2 MON indicator is not shown in the display; if it is, switch it off by pressing the TAPE 2 MONITOR button.
6. Press the BYPASS button to set the surround mode to OFF.
7. Select the front speakers to be used with the SPEAKERS select buttons.
8. Start playing the source component.
9. Gradually increase the volume with the MASTER VOLUME control and adjust the other controls as required.

Audio Adjustments

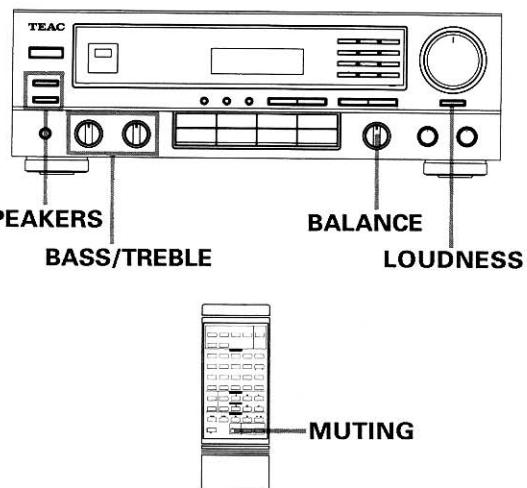

SPEAKERS Select Buttons

When the A and/or B button is pressed, sound will be heard from the speakers connected to the SPEAKERS A and/or B terminals on the rear panel.

Tone (BASS and TREBLE) Controls

These are for boosting and attenuating low and high frequencies. Response will be "flat" with the controls in their center "click" positions.

BALANCE Control

This shifts the sound toward the left or right speaker.

LOUDNESS Button


This button compensates for the non-linear response of the human ear at low volumes. Set this switch to the OFF position when listening at normal levels.

MUTING Button (on the Remote Control Unit)

Press this to mute the sound from the speakers and headphones when answering the telephone, etc. To restore the original volume, press the MUTING button again. While muting is engaged, the MASTER VOLUME level indicator will flicker.

Radio Reception

Auto Tuning

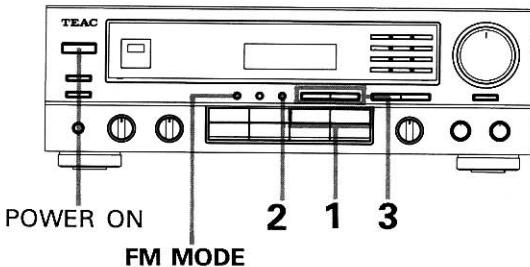

1. Select the AM or FM.
2. Make sure the AUTO indicator appears in the display. If not, press the AUTO/MANUAL TUNING button.
Note: When the power is switched on, the receiver is set to the Auto Tuning mode automatically.
3. Press the UP or DOWN TUNING button. The next station broadcasting at a frequency higher or lower than that of the current station is automatically detected and tuned in. The TUNED indicator appears in the display to indicate that the receiver is correctly tuned to a broadcast.

FM MODE Button

This button is used to alternate FM reception between stereo and mono.

- **Stereo**

To receive FM broadcasts in stereo, press this button to set to the stereo mode (so that the STEREO indicator lights).


- **Mono**

If this button is pressed again while receiving an FM broadcast in the stereo mode, the STEREO indicator goes out and the FM broadcast will be received in mono. It may be difficult to hear stereo broadcasts clearly in areas where the signals are weak and reception is noisy; in such a case, use the mono mode to reduce noise.

Note: When power is switched on or the reception band is changed, the unit is automatically set to the stereo mode.

Manual Tuning

Manual Tuning is generally used to tune to stations broadcasting a signal that is too weak to be received by Auto Tuning.

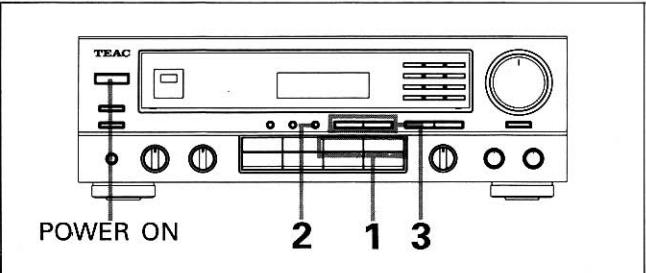

1. Select the AM or FM.
2. Press the AUTO/MANUAL TUNING button so that the AUTO indicator does not appear in the display.
3. When the UP or DOWN TUNING button is pressed momentarily, the frequency changes by a fixed step (see STEPS below). If either tuning button is held depressed for more than 0.5 seconds, the frequency changes continuously until the button is released.

STEPS

Models for U.S.A./Canada

FM: 100-kHz steps

AM: 10-kHz steps


Models for Europe/General Export

FM: 50-kHz steps

AM: 9-kHz steps

Direct Tuning


Using this method, the required frequency is input directly, using the numeric keys.

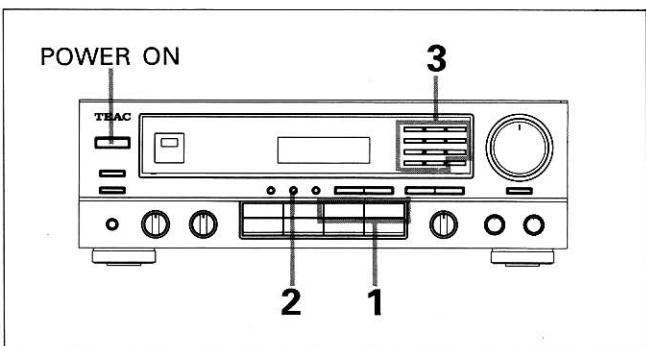


1. Select the AM or FM.
2. Press the DIRECT TUNING button; "—" will blink in the display.
3. Input the frequency of the broadcast you want to hear with the numeric keys.

Models for U.S.A./Canada FM: 100-kHz steps
AM: 10-kHz steps

Ex.: FM 87.7 MHz

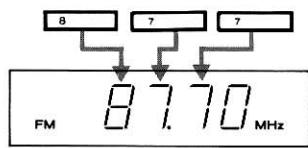

Ex.: AM 780 kHz

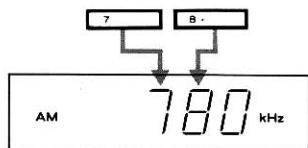


Note:


When inputting the frequency, the last digit need not be entered as it is always "0".

Models for Europe/General Export FM: 50-kHz steps
AM: 9-kHz steps

Ex.: FM 107.55 MHz

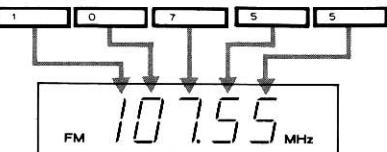

Ex.: AM 1008 kHz

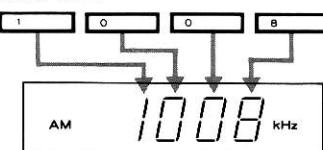

Note:


If the frequency input is as follows, the frequency will blink for several seconds, then the previous frequency will appear in the display again.

- Does not correspond to the fixed tuning steps in each band. (Europe/General Export models)
- Out of the receivable frequency range.

Preset Tuning

The AG-V2050 has a preset memory. If the frequencies of broadcasts are stored in this memory which has a capacity of 30 stations (channels), they can be tuned to by a simplified procedure.


■ Presetting

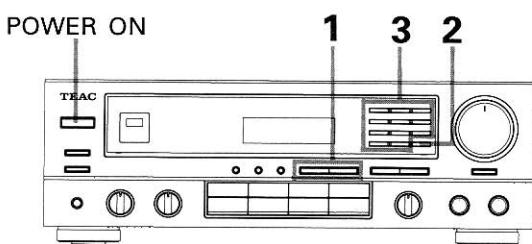


1. Tune to a station by either Auto, Manual or Direct tuning.
2. Press the MEMORY button; the MEMORY indicator will light in the display for approximately 5 seconds.
3. While the MEMORY indicator is lit, press the numeric key(s) to input the channel number in which the data (AM or FM band and frequency) for the broadcast is to be stored.

Note: If a frequency has already been stored in a specified channel, the old data will be lost and replaced by the new data.


Ex.: Channel 1

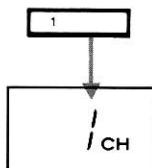


Ex.: Channel 10

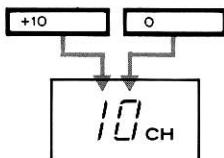

Ex.: Channel 20

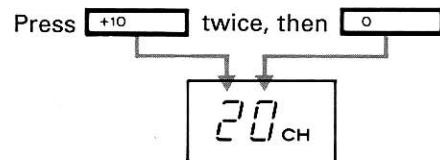

Ex.: Channel 30

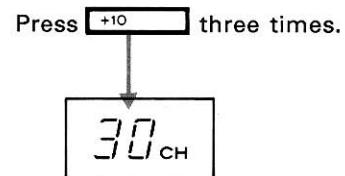

Note: It is not necessary to press the "0" key to input the unit's digit.

4. To release the memory function while the MEMORY indicator appears in the display, press the MEMORY button again.

■ Recalling Frequencies

Press the numeric key(s) corresponding to the channel number to tune directly to a broadcast.


■ Using the Memory Scan function

When the MEMORY SCAN button (on the remote control) is pressed, the preset channels in which frequencies in the band (AM or FM) selected have been stored are scanned at 5-second intervals. When you hear a broadcast you want to listen to, release the Memory Scan function by pressing the MEMORY SCAN button again.

■ Using the Memory Skip function


Every time the MEMORY SKIP button (on the remote control) is pressed, tuning skips to the next higher channel broadcasting in the band selected.

Listening to Records and Compact Discs

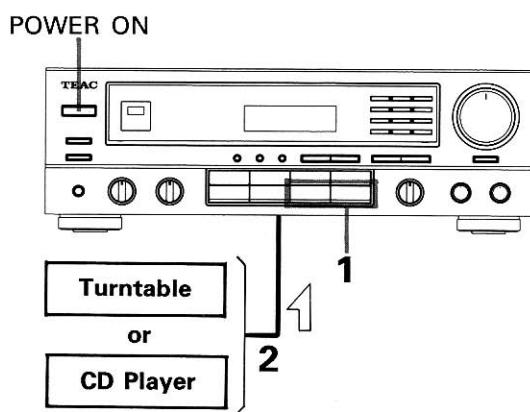

1. Press the PHONO or CD button.
2. Play the turntable (with a moving magnet cartridge) or CD player.

Playing Tapes

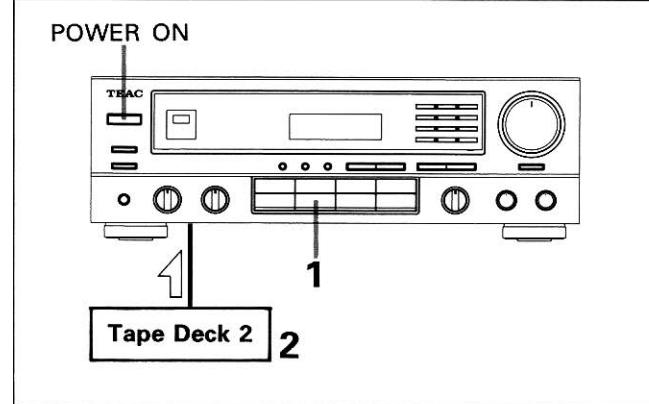

Note:

If two TEAC tape decks are used in the system, the use of the UR-402 remote control unit may cause the two decks to operate simultaneously.

1. Set the TAPE 2 MONITOR button to ON; the TAPE 2 MON indicator will appear in the display.
2. Operate tape deck 2 for playback.

■ Playing Tape Deck 1


To play back using tape deck 1, set the TAPE 2 MONITOR button to OFF then press the TAPE 1 button. Then operate tape deck 1 for playback.

Recording Tapes

Note:

If two TEAC tape decks are used in the system, the use of the UR-402 remote control unit may cause the two decks to operate simultaneously.

Recording a Source other than Tape

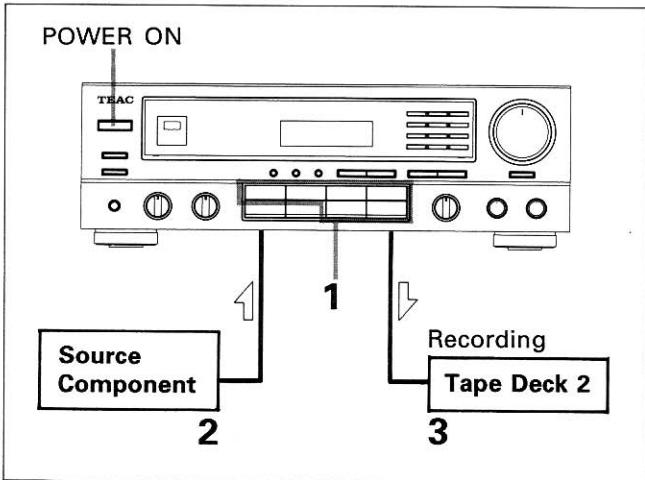

1. Make sure the TAPE 2 MONITOR button is set to OFF, then press the source selector button corresponding to the source to be recorded.
2. Play the source.
3. Operate tape deck 2 for recording.


■ Tape Monitoring

If tape deck 2 has separate record and playback heads, during recording, the recorded sound can be heard from the speakers with the TAPE 2 MONITOR button set to ON.

■ Simultaneous Recording

A single source can be recorded simultaneously by tape decks 1 and 2. To do this, after step 2 above, operate both decks for recording.

Tape Dubbing (from Tape Deck 1 to Tape Deck 2)

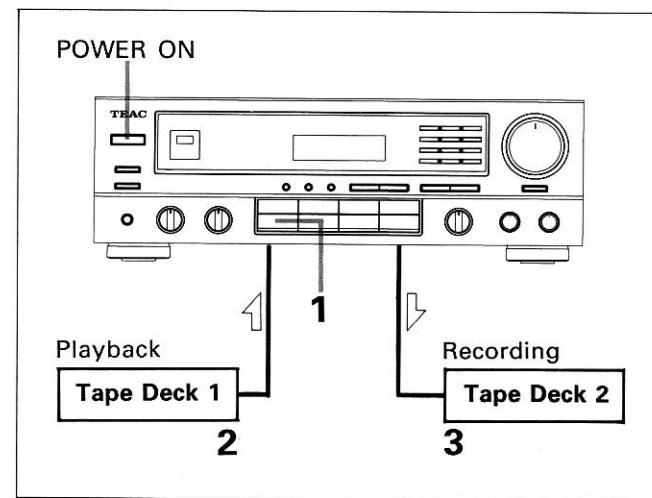

1. Make sure the TAPE 2 MONITOR button is set to OFF, then press the TAPE 1 button.
2. Play tape deck 1.
3. Operate tape deck 2 for recording.

■ Tape Monitoring

If tape deck 2 (the tape deck used for recording) has separate record and playback heads, during dubbing, the recorded sound can be heard from the speakers with the TAPE 2 MONITOR button set to ON.


■ Tape Deck 2-to-Tape Deck 1 Dubbing

In addition to the Tape Deck 1-to-Tape Deck 2 dubbing described above, dubbing from tape deck 2 to tape deck 1 is also possible.

To do this, perform the following: press any source selector button other than TAPE 1.


Set the TAPE 2 MONITOR button to ON. Play tape deck 2. Operate tape deck 1 for recording.

Playing Video Sources

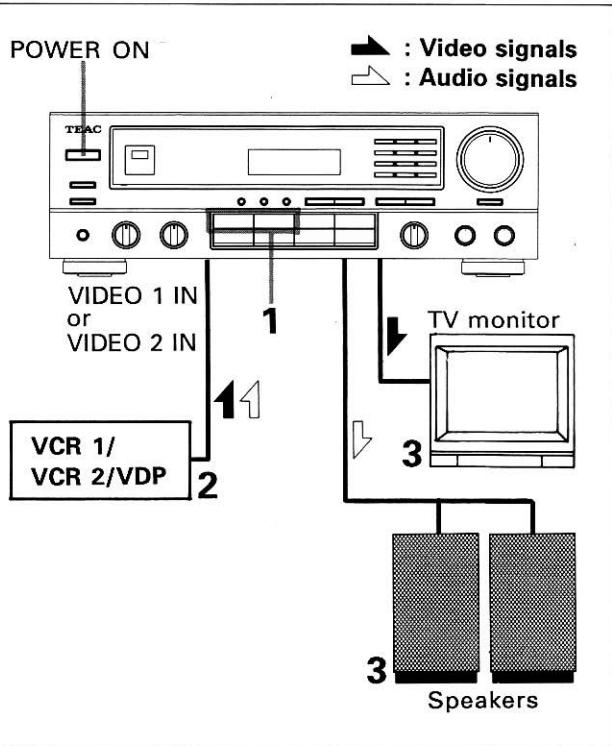

Recording with a Video Deck

Video Tape Dubbing

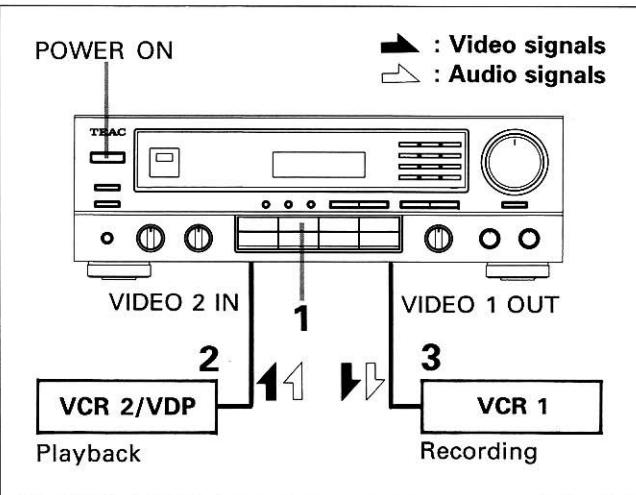


1. Press the VIDEO 2 button with the TAPE 2 MONITOR button set to OFF.
2. Operate VCR 2/VDP for playback.
3. Operate VCR 1 for recording. In this way, the video/audio signals from VCR 2/VDP can be dubbed onto VCR 1.

1. Press the VIDEO 1 or VIDEO 2 button.
2. Play the component corresponding to the button pressed.
3. The picture from the video source can be seen on the TV and the sound from the video source will be heard from the speakers.

S.A.V.E. (Second Audio Source for Video Editing) SYSTEM Function

This feature lets you replace the sound from a VCR or VDP with sound from an AUDIO source such as CD during video signal dubbing.

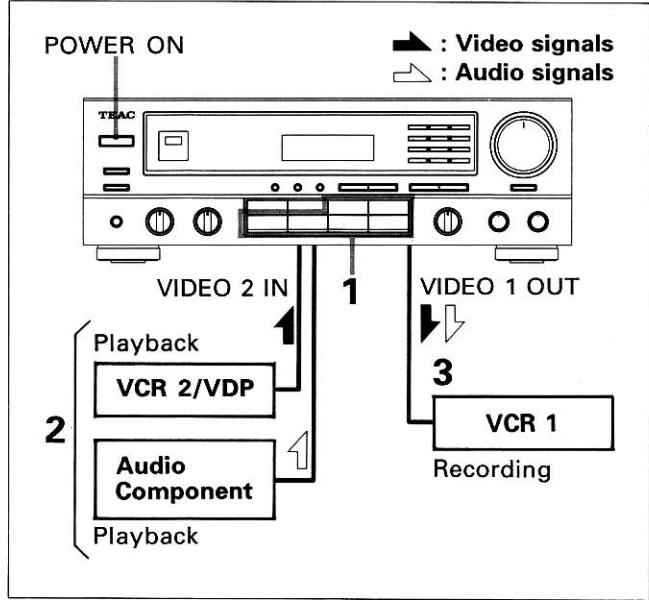

1. Select the audio source with the source selector buttons.
2. Operate VCR 2/VDP and the selected audio component for playback.
3. Operate VCR 1 for recording. In this way, the S.A.V.E. operation will be performed.

Note: The video signals from VCR 2/VDP can always be dubbed to VCR 1, regardless of the settings of the source selector buttons, etc.

DOLBY SURROUND Effect


This mode allows you to enjoy video tapes, videodiscs and other sources encoded with Dolby Surround information.

This unit incorporates a Dolby Surround decoder circuit to reproduce the original recorded information accurately, to create a realistic feeling of presence, like that in a movie theater.

Only certain types of sound will be heard from the rear speakers when playing video software such as a video tape carrying the "DOLBY SURROUND" mark. For instance, a car or plane, moving front to back, or music and sound effects. The main dialogue and "On Screen" actions will be heard through the front speakers. The producer of each movie determines how the sound is recorded.


Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under one or more of the following patents: U.S. numbers 3,632,886, 3,746,792, and 3,959,590; Canada numbers 1,004,603 and 1,037,877. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Speaker Installation

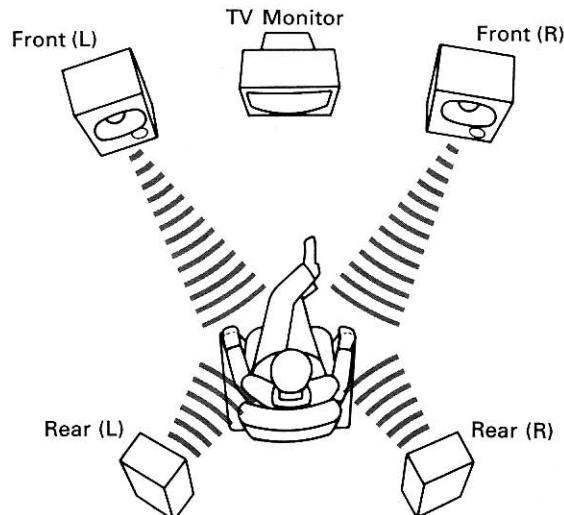

MEMORY BACKUP FUNCTION

Playing DOLBY SURROUND Sound

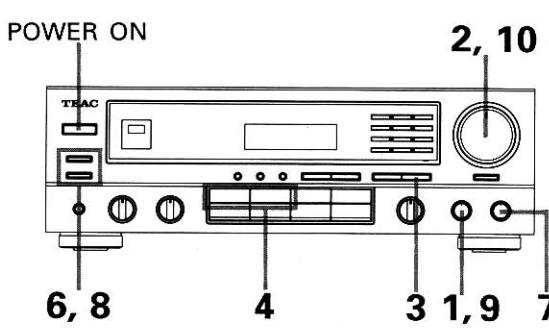

As long as the power plug is connected to a wall outlet, the preset station memories (described on page 15) and the following items set before the receiver was switched off are maintained indefinitely. They are retained in memory for about 4 hours even if the power plug is disconnected from the wall outlet.

Source selector button settings
Reception frequency
Reception band
Preset channel number
DOLBY SURROUND mode


1. Set the REAR LEVEL control to the maximum level.
2. Set the MASTER VOLUME control to the normal listening level.
3. Press the DOLBY SURROUND button.
4. Play the video software with the **DOLBY SURROUND** mark.
5. Play a scene with a monaural sound, such as dialogue in the video software, not an action scene.
6. Set the front speakers to OFF using the SPEAKERS select button(s).
7. Adjust the INPUT BALANCE control between the left and right inputs so that the dialogue from the rear speakers is at its quietest. (Normally the INPUT BALANCE control is set to the center position.)
8. Set the front speakers to ON using the SPEAKERS select button(s).
9. Adjust the REAR LEVEL control to balance the relative volumes of the front speakers and rear speakers.
10. Adjust the MASTER VOLUME control for the most appropriate overall volume.

■ To Release the DOLBY SURROUND Mode

Press the BYPASS button.

TEAC SYSTEM REMOTE-CONTROLLED OPERATION

Using a CD Player and Cassette Deck with a REMOTE SENSOR Window

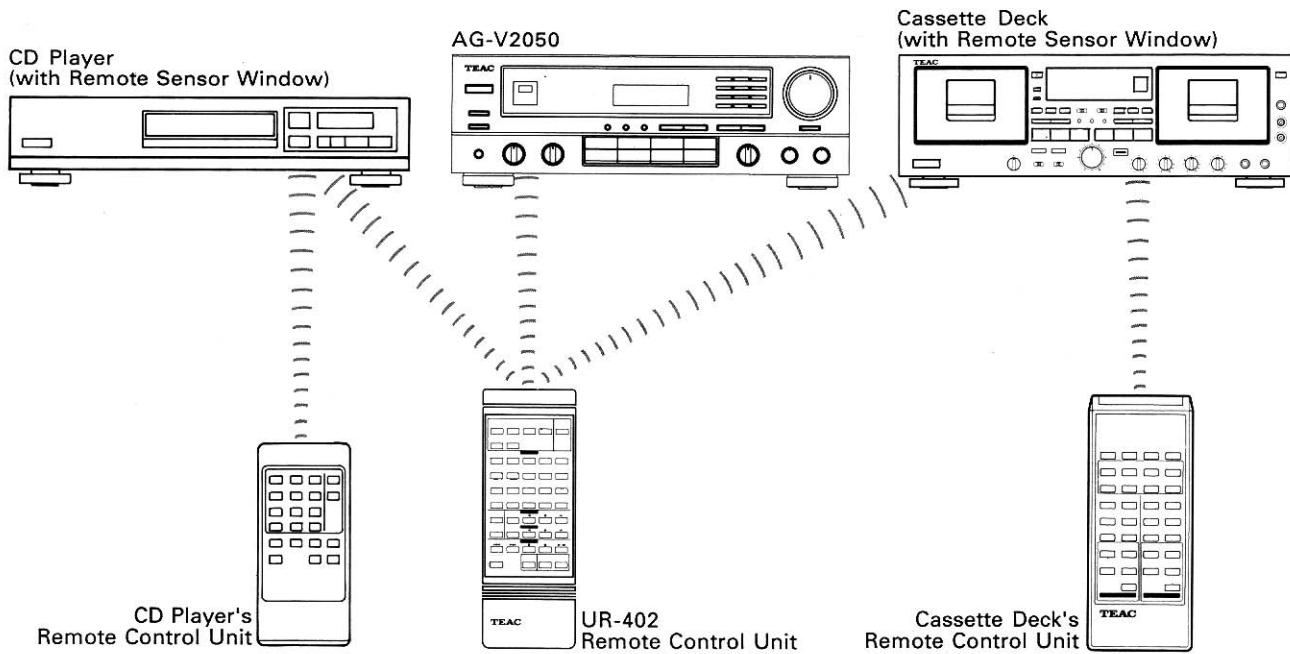


As shown, if the other TEAC components have REMOTE SENSOR windows, the provided UR-402 Remote Control Unit can remotely control the operations of these other components directly, in addition to the remote control of the AG-V2050 receiver. If the other components require operations beyond the basic ones provided by the UR-402, use the remote control units provided with the components.

Note:


The following CD players cannot be directly controlled using the UR-402 Remote Control Unit. To remote-control them using the UR-402, connect the AG-V2050 to the CD players using the remote control cable (optional), then operate the UR-402 pointing it toward the AG-V2050.

Relevant models:

CD-P250, CD-P280, ED-570, PD-435, PD-485, PD-495, PD-555.

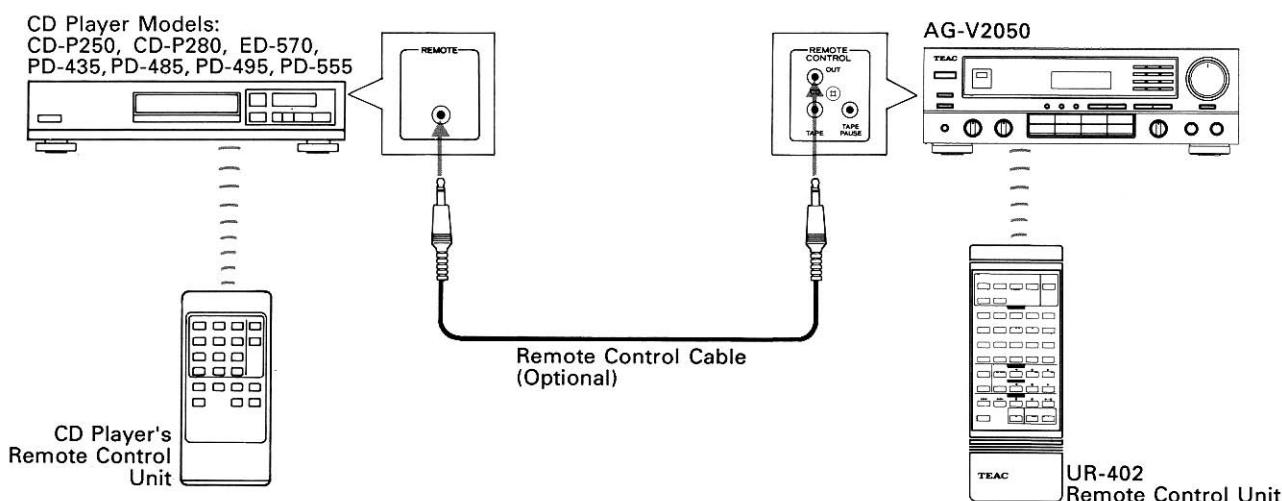


Using a Cassette Deck without a REMOTE SENSOR Window

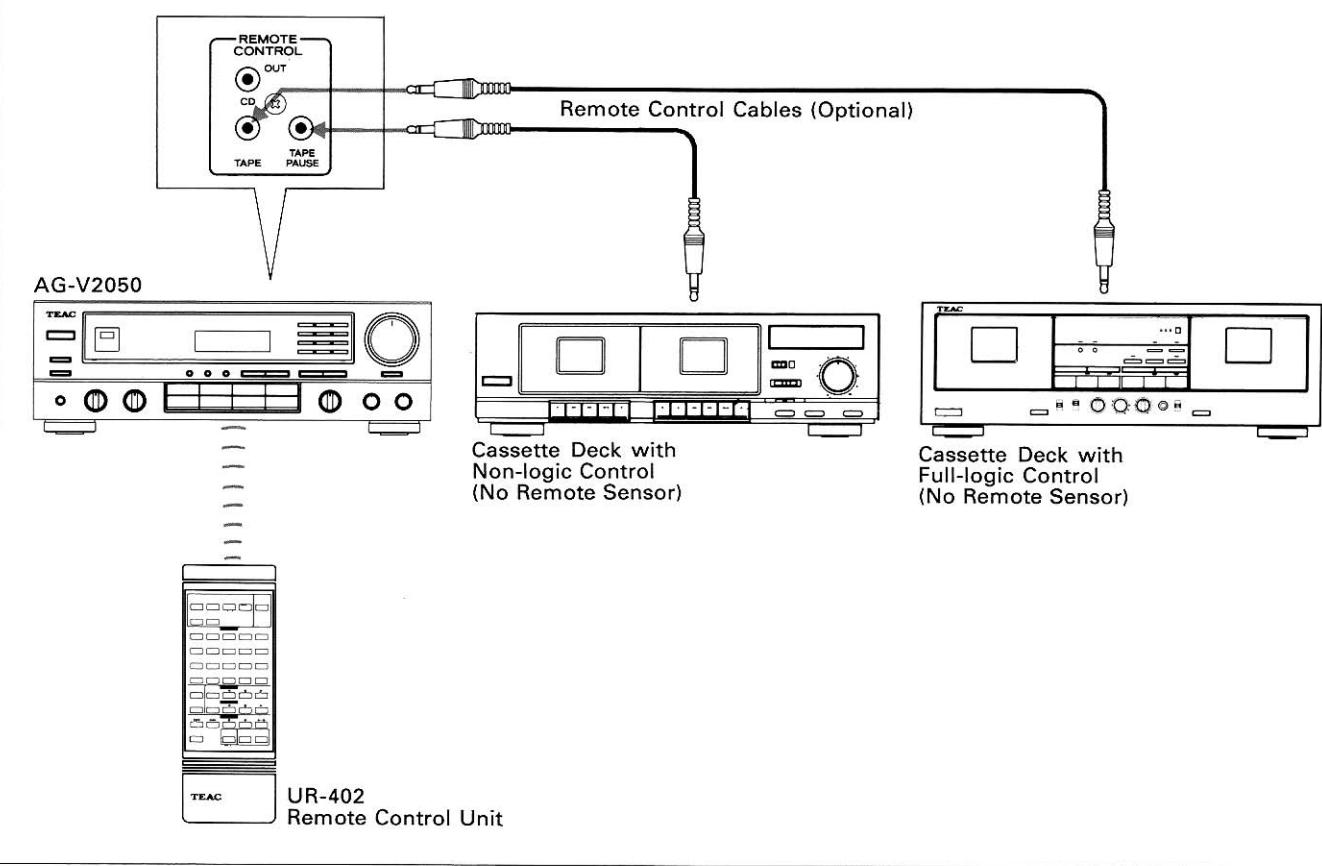

The illustration shows a system using UR (Unified Remote Control) cassette decks without REMOTE SENSOR windows. When a deck with full-logic control is connected to the AG-V2050 receiver using a remote control cable (optionally available), its basic operations are remote-controlled using the UR-402 Remote Control Unit. When a deck with non-logic control is connected, only the pause mode can be remote-controlled.

Buttons for the Operation of Other TEAC Components

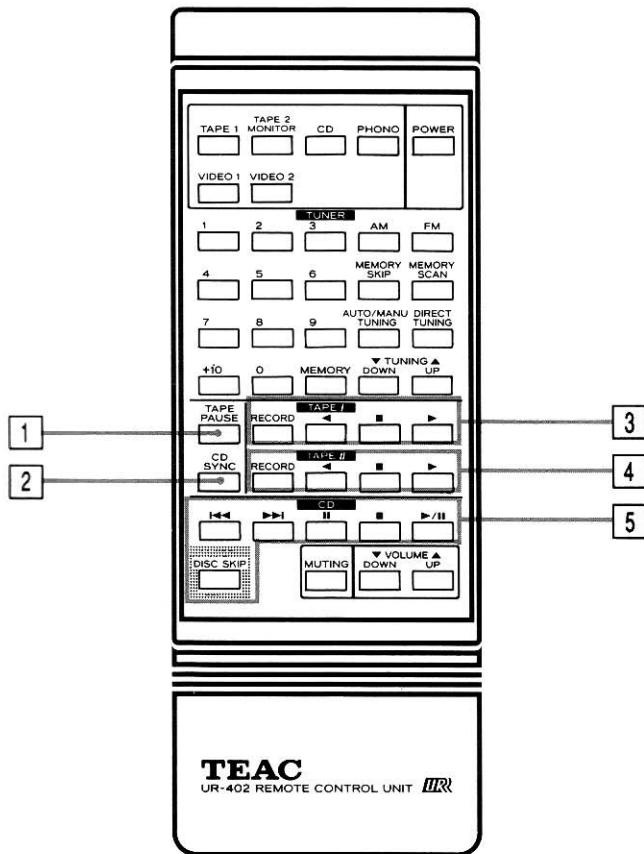

Remote Control Unit (UR-402)

Note:

Do not confuse "TAPE I" as described in this section and "TAPE 1" which means the tape deck connected to the TAPE 1 terminals.

The same thing also applies to "TAPE II" and "TAPE 2".

1 TAPE PAUSE button

Can only be used with cassette decks with non-logic control. Press once to set the cassette deck to the pause mode; press again to restart.

2 CD SYNC button

When the AG-V2050 is used in a system with a TEAC CD Player and a TEAC cassette deck (with full-logic control), it is possible to synchronize the operations of the CD player and cassette deck, so that they can be started at exactly the same time, when copying a CD onto tape.

In this configuration, the CD player's CD/DECK SYNC terminal and the cassette deck's CD/DECK SYNC terminal should be connected using the optional WR-7000 sync cable (note that this is different from the optional remote control cable). Synchronized operation of the CD player and cassette deck can be started by pressing either the CD SYNC button on the remote control unit or the CD SYNC button on the cassette deck.

3 TAPE I buttons

The TAPE I mechanism of a double-transport cassette deck with full-logic control can be operated using these buttons.

Notes:

- To start recording, simply press the RECORD button; it does not have to be pressed together with PLAY.
- If the TAPE I mechanism of the double-transport cassette deck does not have a recording function, pressing the TAPE I RECORD button will have no effect.

4 TAPE II buttons

The TAPE II mechanism of a double-transport cassette deck with full-logic control can be operated using these buttons. They are also used to operate a single-transport cassette deck with full-logic control.

Notes:

- To start recording, simply press the RECORD button; it does not have to be pressed together with PLAY.

5 CD buttons

- **SKIP (◀◀, ▶▶) buttons:** Each time these are pressed, the pickup moves to the beginning of the next tune in either the forward or reverse direction. If held depressed, skipping continues until the button is released.
- **PAUSE (II), PLAY/PAUSE (▶/II) buttons:** To temporarily stop CD play, press the PAUSE button if the CD player has an independent PAUSE button; press the PLAY/PAUSE button if it has a PLAY/PAUSE button.
- **STOP (■) button:** Press to stop the CD player.
- **DISK SKIP button:** Selects the next disc in a CD auto-changer.

TROUBLESHOOTING

To determine any problem with your receiver, always check the most obvious possible causes first. If any problem still remains even after you have checked the items below, consult your nearest TEAC dealer.

Problem	Probable Cause	Remedy
Power		
No power	Power cord is not plugged in.	Plug in the power cord securely.
Amplifier		
Sound cannot be heard.	The required SPEAKERS select button is not ON.	Set the required SPEAKERS select button to ON.
	The MUTING button is set to ON.	Be sure to set the MASTER VOLUME control to minimum then set the MUTING button to OFF.
	The TAPE 2 MONITOR button is ON.	Set the TAPE 2 MONITOR button to OFF.
Sound is only heard from one channel.	The BALANCE control is set to one end.	Adjust the BALANCE control.
No sound from the rear speakers.	The SURROUND button is set to BYPASS.	Press the DOLBY SURROUND button.
	When the MASTER VOLUME setting is at low level, the volume of the rear speakers becomes even lower.	Increase the volume level of the rear speakers using the REAR LEVEL control.
Low-frequencies are insufficient and the image of mid-frequencies is not fixed.	The plus and minus connections of either front speaker are reversed.	Connect the speakers with the correct polarities.
Hum or noise.	Turntable is not grounded.	Connect the ground wire to the GND terminal on the rear panel.
	Audio equipment is too near the TV.	Move the TV away from the audio equipment.
Tuner		
No tuning.	The antenna is not connected.	Connect the antenna.
Auto tuning not possible.	Signal strength of stations is too weak.	Perform manual tuning or direct tuning.
		Use a better external antenna and adjust its direction.
STEREO indicator fails to light during stereo broadcasts.	The FM MODE button is set to Mono mode.	Set the FM MODE button to Stereo mode.
Electromagnetic interference.	Ignition noise from cars.	Use the external antenna and install it away from the street.
	TV too near the receiver.	Move the receiver away from the TV.
Remote Control Unit		
Remote control impossible.	The batteries are exhausted.	Replace with new batteries.
	The remote control unit is too far from the receiver or out of the effective range.	Operate the remote control unit within the effective range.

Caution:

Since the receiver incorporates a microprocessor, it may not operate correctly because of external noise, etc. If this happens, disconnect the power plug from the wall outlet, and wait approx. ten seconds, reconnect the power plug then turn the POWER switch ON and restart operations.

SPECIFICATIONS

Amplifier Section

Output Power (Front):

F.T.C. Rating:

100 watts RMS per channel minimum, both channels driven into 8 ohms from 20 Hz to 20 kHz with no more than 0.07% total harmonic distortion (U.S.A./ Canada)

RMS Power (20 Hz – 20 kHz):

75 watts/8 ohms, 0.07% (Europe)

104 watts/8 ohms, 0.07% (General Export)

DIN Power: 80 watts/8 ohms (Europe)

Output Power (Rear):

35 watts (0.9% THD, 1 kHz)

Total Harmonic Distortion (Front):

0.01% (at 100 watts, 1 kHz)

Intermodulation Distortion (Front):

0.02% (at 100 watts)

Delay Time:

DOLBY SURROUND: 20 ms

Input Sensitivity/Impedance:

PHONO: 2.5 mV/47 k ohms

LINE*: 200 mV/47 k ohms

Frequency Response:

PHONO: 30 Hz – 20 kHz, ± 1 dB

LINE*: 10 Hz – 60 kHz, – 3 dB

Signal-to-Noise Ratio:

PHONO: 70 dB

LINE*: 76 dB

Tone Control:

BASS: ± 10 dB at 100 Hz

TREBLE: ± 10 dB at 10 kHz

FM Tuner Section

(without notes 98.1 MHz, 65 dBf)

Tuning Range:

87.5 MHz – 108.0 MHz (100 kHz steps)
(U.S.A./Canada)

87.50 MHz – 108.00 MHz (50 kHz steps)
(Europe/General Export)

Usable Sensitivity (IHF):

Mono: 13.2 dBf (U.S.A./Canada/General Export)
Mono: 16.2 dBf (Europe)

50 dB Quieting Sensitivity:

Mono: 18 dBf (U.S.A./Canada/General Export)

Mono: 20 dBf (Europe)

Stereo: 38 dBf (U.S.A./Canada/General Export)

Stereo: 42 dBf (Europe)

Capture Ratio:

2.0 dB (U.S.A./Canada/General Export)

2.5 dB (Europe)

Image Rejection Ratio:

40 dB (U.S.A./Canada/General Export)
80 dB (Europe)

AM Suppression Ratio: 60 dB

RF Intermodulation Ratio: 65 dB

Total Harmonic Distortion (1 kHz):

Mono: 0.4%

Stereo: 0.5%

Frequency Response: 30 Hz – 15 kHz, +1/ – 1.5 dB

Stereo Separation (1 kHz): 43 dB

Signal-to-Noise Ratio:

Mono: 76 dB

Stereo: 70 dB

AM Tuner Section

Tuning Range:

530 kHz – 1,710 kHz (10 kHz steps)
(U.S.A./Canada)

522 kHz – 1,611 kHz (9 kHz steps)
(Europe/General Export)

Usable Sensitivity:

52 dB/m

Total Harmonic Distortion:

0.8% at 85 dB/m

Signal-to-Noise Ratio:

45 dB at 85 dB/m

Video Section

Input Sensitivity/Impedance: 1.0 Vp-p/75 ohms

Output Level/Impedance: 1.0 Vp-p/75 ohms

Frequency Response: 5 Hz – 6 MHz, – 3 dB

Signal-to-Noise Ratio: 60 dB (1 kHz, HPF IN)

General

Power Requirements:

120 V AC, 60 Hz (U.S.A./Canada)

230 V AC, 50 Hz (Europe)

115/230 V AC, 50-60 Hz (General Export)

Power Consumption:

2.5 A (U.S.A./Canada)

420 W (Europe)

585 W (General Export)

AC Outlets:

Switched × 2, Total 100 W max. (1 A max.)
(U.S.A./Canada)

Switched × 1, 100 W max.
(Europe/General Export)

Dimensions (WxHxD):

435 × 149 × 350 mm
(17-1/8" × 5-7/8" × 13-3/4")

Weight (net):

10 kg (22-1/16 lbs.)

Standard Accessories:

AM Loop Antenna × 1

FM "T" Type Antenna × 1

Remote Control Unit (UR-402) × 1

Battery ("AA", "R06", SUM-3) × 2

Matching Transformer (300 ohms to 75 ohms) × 1
(Europe)

AC Plug Adapter × 1 (General Export)

* LINE means CD, VIDEO 1, VIDEO 2, TAPE 1 and

TAPE 2.

● Improvements may result in specifications and features changing without notice.

● Illustrations may differ slightly from production models.

SOMMAIRE

PRECAUTIONS.....	26
RACCORDEMENTS	27
Raccordements de système.....	27
Raccordements d'antenne.....	28
Antenne FM (Etats-Unis/Canada/	
Exportation générale).....	28
Antenne FM (Europe).....	29
Antenne AM.....	30
Raccordements de haut-parleurs.....	31
Sélecteur d'impédance de haut-parleurs avant (IMPEDANCE SELECTOR)	31
COMMANDES ET INDICATEURS	32
TELECOMMANDE.....	33
Piles.....	33
Mise en place des piles.....	33
Remplacement des piles.....	33
Précautions concernant les piles	33
Utilisation de la télécommande	33
Précautions sur l'utilisation de la télécommande.....	34
FONCTIONNEMENT.....	34
Fonctionnement de base	34
Réglages audio	35
Réception de la radio	35
Syntonisation automatique.....	35
Syntonisation manuelle.....	36
Syntonisation directe.....	36
Syntonisation préréglée.....	37
Ecoute de disques ou de disques audionumériques.....	38
Lecture de cassettes	38
Enregistrement de cassettes.....	39
Enregistrement d'une source autre qu'une bande.....	39
Copie de bande (de la platine 1 vers la platine 2)	39
Lecture de sources vidéo.....	40
Enregistrement avec une platine vidéo	40
Copie de bande vidéo.....	40
Fonction S.A.V.E (Second Audio Source for Video Editing) SYSTEM.....	41
Effet DOLBY SURROUND.....	41
Installation des haut-parleurs	41
Lecture de son DOLBY SURROUND	42
FONCTION DE SOUTIEN DE LA MEMOIRE.....	42
FONCTIONNEMENT TELECOMMANDE D'UNE CHAINTEAC.....	43
En utilisant un lecteur CD et une platine à cassette avec une fenêtre REMOTE SENSOR....	43
En utilisant une platine à cassette sans fenêtre REMOTE SENSOR	44
Touches pour le fonctionnement d'autres appareils TEAC	45
EN CAS DE DIFFICULTES.....	46
CARACTERISTIQUES TECHNIQUES	47

PRECAUTIONS

Mise en place de l'appareil

Comme l'appareil incorpore un amplificateur puissant, il se dégage de la chaleur par l'arrière et le haut de l'appareil; l'endroit où l'appareil est à installer doit être bien ventilé. Eviter de l'installer là où il pourrait être exposé à des températures élevées, au soleil, à la poussière. Si les cordons de raccordement sont trop longs, en particulier les câbles des haut-parleurs, le son peut être dégradé. Laisser les cordons de raccordement aussi courts que possible.

Pour le CANADA

CORDON DE CONNEXION CA

ATTENTION:

POUR ÉVITER LES CHOCS ÉLECTRIQUES,
INTRODUIRE LA LAME LA PLUS LARGE DE LA
FICHE DANS LA BORNE CORRESPONDANTE DE
LA PRISE ET POUSSER JUSQU'AU FOND.

Pour le CANADA


LE PRESENT APPAREIL NUMERIQUE N'EMET
PAS DE BRUITS RADIOELECTRIQUES
DEPASSANT LES LIMITES APPLICABLES AUX
APPAREILS NUMERIQUES DE CLASSE B
PRESCRITES DANS LE REGLEMENT SUR LE
BROUILLAGE RADIOELECTRIQUE EDICTÉ PAR
LE MINISTÈRE DES COMMUNICATIONS DU
CANADA.

RACCORDEMENTS

- Ne pas brancher les cordons d'alimentation de n'importe quel appareil sur les prises secteur et ne pas mettre leur interrupteurs d'alimentation (POWER) sur marche tant que tous les raccordements ne sont pas terminés.

Raccordements de système

Se reporter à "Raccordements d'antenne" aux pages 28 à 30.

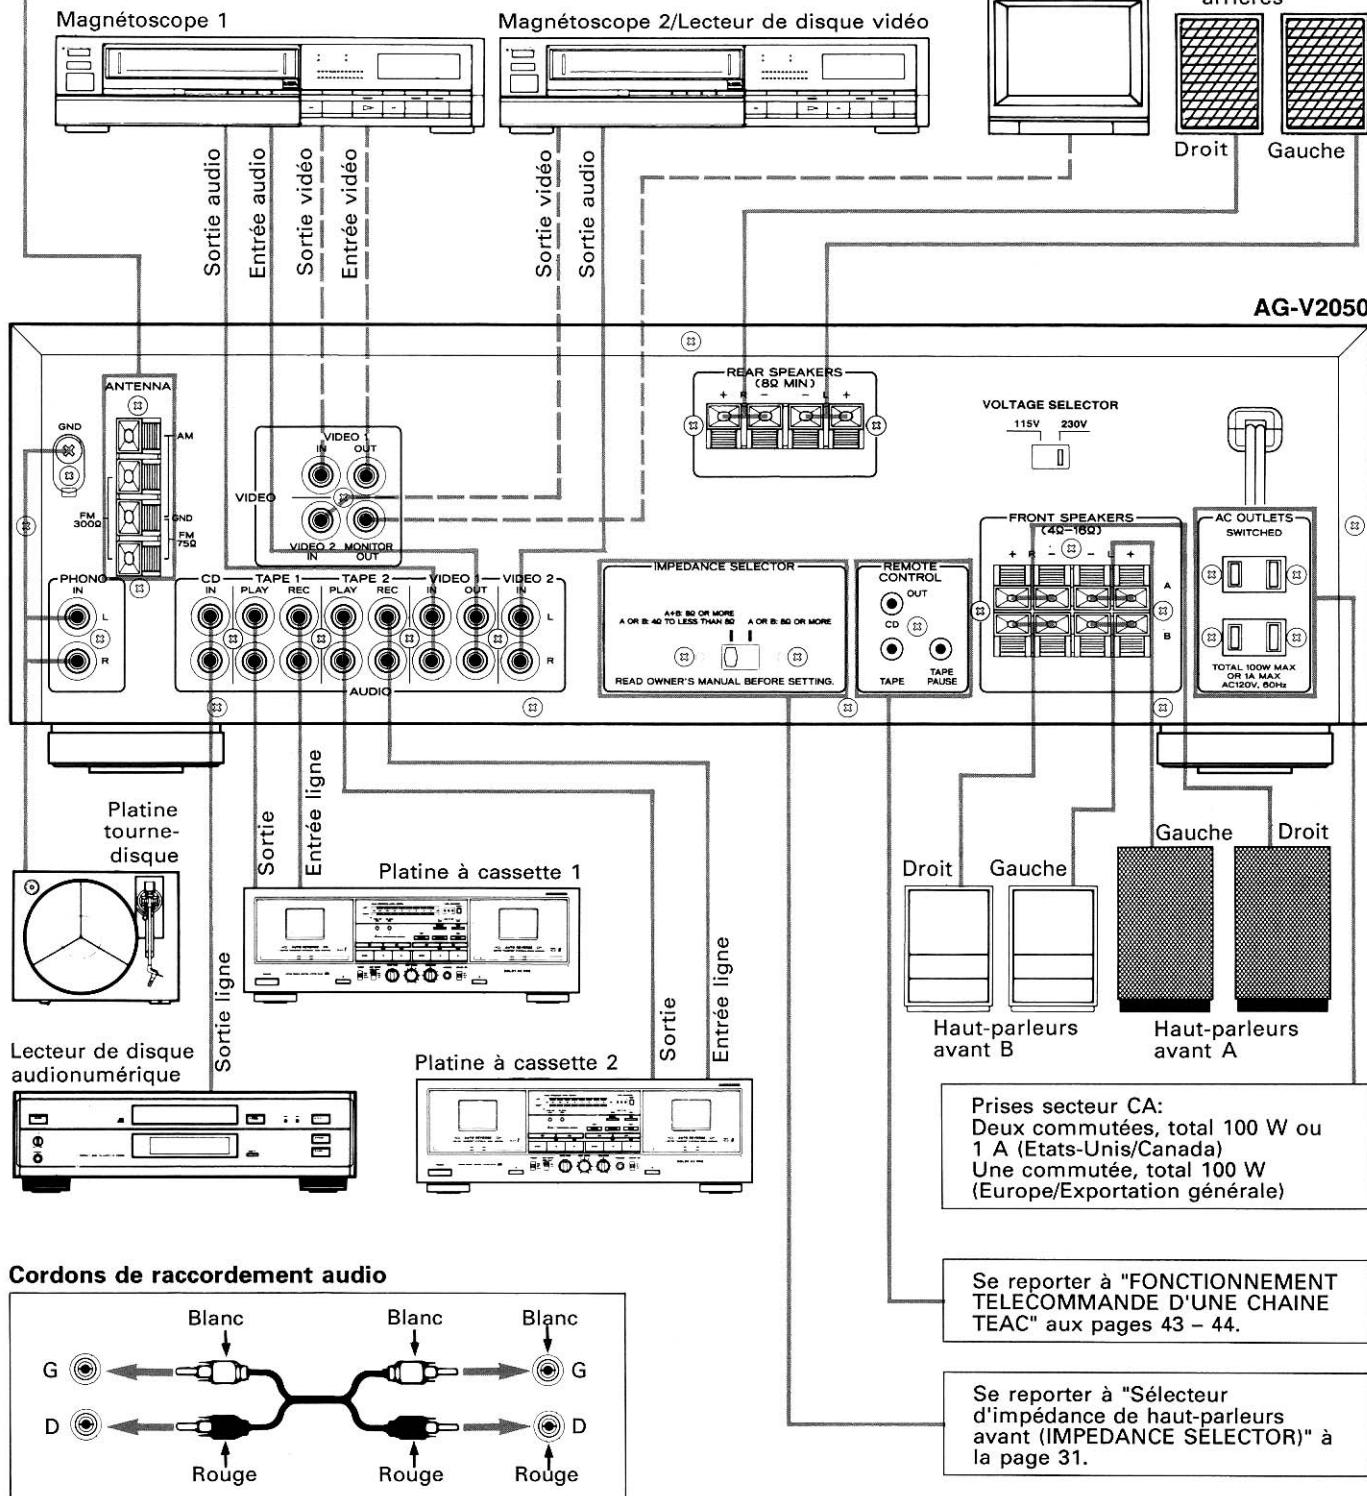


Raccordements d'antenne


Antenne FM (Etats-Unis/Canada/Exportation générale)

Dans une région avec des signaux FM puissants, une antenne de type "T" est suffisante. L'étendre en forme de "T" et brancher les deux fils à la base du "T" aux bornes d'antenne comme montré. Pour des détails sur la façon de raccorder les fils d'antenne aux bornes, voir l'illustration. Etendre le haut du "T" et fixer avec des punaises, etc. à un mur ou un cadre de fenêtre, pour la meilleure réception possible.

Antenne FM de type "T" (300 Ω) (fournie)

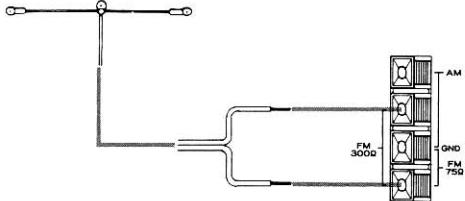


Comment raccorder l'antenne

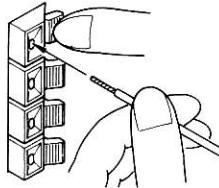

Pousser sur le levier et introduire l'extrémité dénudée du fil dans le bon trou puis relâcher le levier pour que le fil soit bien maintenu en place.

Dans une région où les signaux FM sont faibles, il peut être nécessaire d'utiliser une antenne FM externe asymétrique 75 ohms. Une antenne à 3 éléments est généralement suffisante; si vous habitez dans une région où les signaux FM sont particulièrement faibles, il peut être nécessaire d'utiliser une antenne à 5 éléments ou plus. Les antennes 75 ohms utilisent un câble coaxial et doivent être raccordées comme suit: d'abord dénuder le revêtement du câble, puis torsader le fil de blindage pour que l'âme et le blindage puissent être raccordés comme montré.


Antenne FM extérieure (75 Ω)

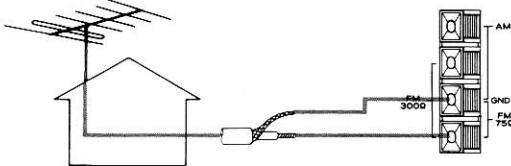

Antenne FM (Europe)


Les modèles pour l'Europe sont conçus pour le raccordement d'une antenne FM externe asymétrique 75 ohms en utilisant le transformateur d'adaptation fourni comme montré. Une antenne à 3 éléments est généralement suffisante; si vous habitez dans une région où les signaux FM sont particulièrement faibles, il peut être nécessaire d'utiliser une antenne à 5 éléments ou plus.

Raccorder le câble coaxial de l'antenne au transformateur d'adaptation comme montré. Après avoir terminé le raccordement, brancher le transformateur à la prise "FM 75Ω".

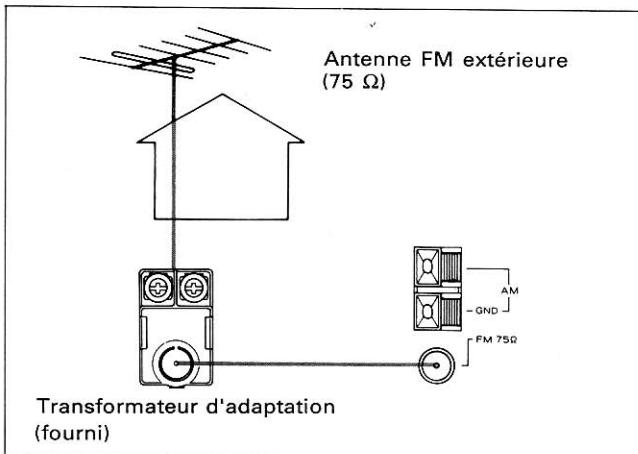


Si vous vivez relativement près d'un émetteur et voulez utiliser l'antenne FM de type "T" fournie, vous devez la brancher au transformateur d'adaptation fourni.

Raccorder les fils à la base du "T" aux bornes du transformateur d'adaptation comme montré. Brancher le transformateur à la prise "FM 75Ω", étendre le haut du "T" et fixer avec des punaises à un mur ou un cadre de fenêtre, où la réception est la meilleure.

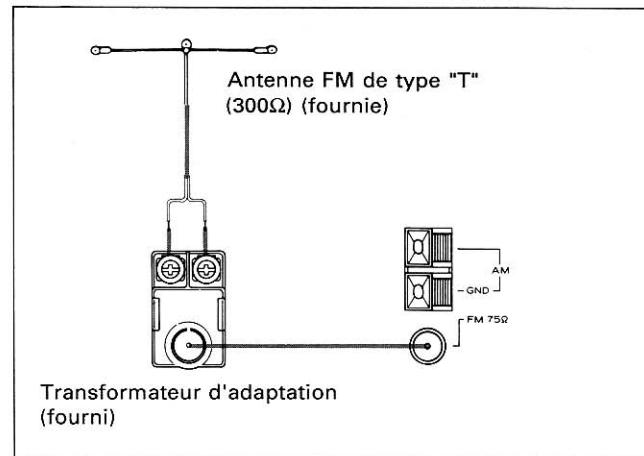


Comment raccorder un câble coaxial au transformateur d'adaptation


① Dénuder le câble comme montré ci-dessous.

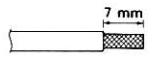

Dénuder le revêtement extérieur.

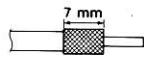


Retourner le blindage sur le revêtement.

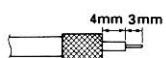


Dénuder l'âme.

② Retirer le capot en poussant les pièces latérales vers l'extérieur avec vos ongles.

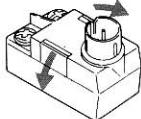

③ Introduire l'âme dans la fente dans l'ergot métallique comme montré en A. Sertir les griffes métalliques avec des pinces, etc. pour qu'elles tiennent la partie du blindage. Remettre le capot.

Griffes métalliques

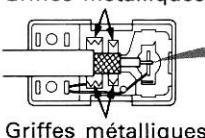

Introduire dans la fente.




Griffes métalliques

Antenne AM

■ Antenne cadre AM

Une antenne cadre AM à haute performance est fournie avec le récepteur et c'est suffisant pour une bonne réception dans la plupart des régions. Fixer l'antenne cadre à la charnière sur le support d'antenne cadre fourni puis brancher ses fils aux bornes d'antenne AM comme montré. Pour des détails sur le raccordement des fils d'antenne aux bornes, voir "Comment raccorder l'antenne" à la page 28.


Placer le support d'antenne sur une étagère, etc. ou le fixer à un mur, etc. avec des vis pour qu'il soit le plus loin possible de la chaîne, des cordons de haut-parleur et du cordon d'alimentation pour éviter des parasites. Comme montré, tourner l'antenne cadre pour la meilleure réception. Il y a un trou dans l'antenne cadre et il peut être utilisé pour suspendre l'antenne avec une vis dans un cadre de fenêtre, etc.

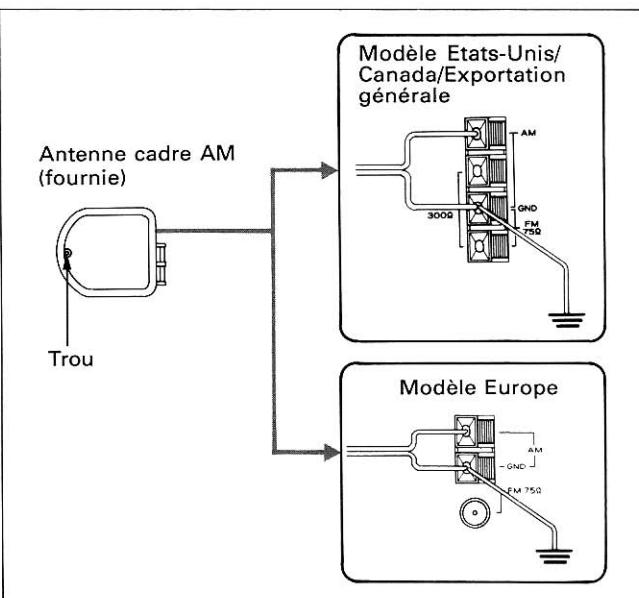

■ Antenne AM extérieure


Si vous avez des difficultés pour recevoir clairement des émissions AM avec l'antenne cadre AM (parce que vous êtes trop loin de l'émetteur ou dans un immeuble en béton, etc.), il peut être nécessaire d'utiliser une antenne AM extérieure. Utiliser un fil électrique isolé plus long que 5 mètres, dénuder une de ces extrémités, et la raccorder à la borne indiquée. Le fil d'antenne doit être placé à l'extérieur ou en intérieur près d'une fenêtre. Pour une meilleure réception, raccorder la borne de masse GND à une bonne terre.

Remarque: Même en utilisant une antenne AM extérieure, ne pas débrancher l'antenne cadre AM.

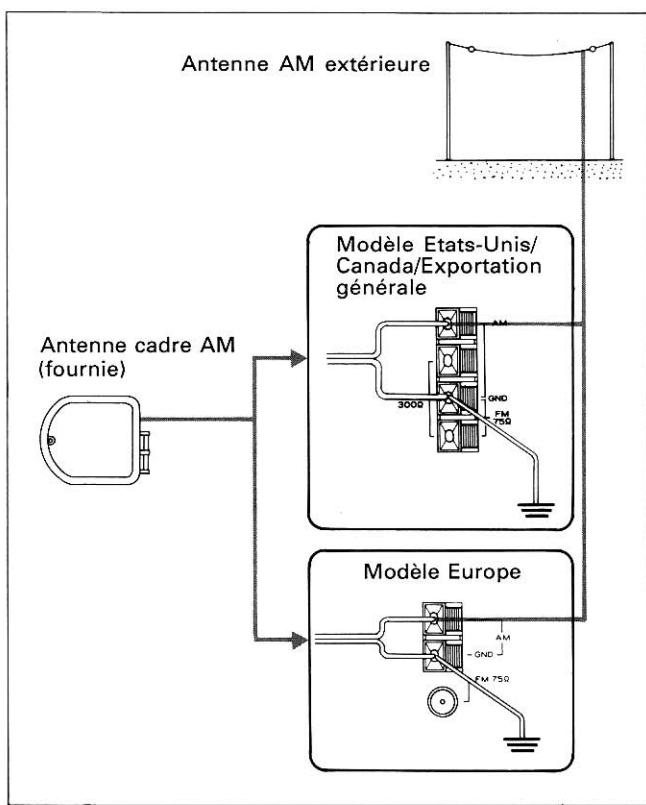


Réglage d'antenne cadre AM

Sur une étagère, etc.

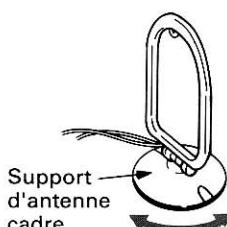

Trouver la direction dans laquelle la réception est meilleure.

Sur un mur, etc.

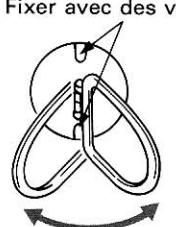

Trouver la direction dans laquelle la réception est meilleure.


Raccordements de haut-parleurs

Précautions:

- Pour éviter d'endommager les haut-parleurs en entrant un signal soudain de haut niveau, bien couper l'alimentation avant de brancher les haut-parleurs.
- Bien utiliser des haut-parleurs avant ayant une impédance de 4 à 16 ohms et des haut-parleurs arrières ayant une impédance de 8 ohms ou plus.


Raccorder la paire principale des haut-parleurs avant aux bornes FRONT SPEAKERS A, et raccorder la seconde paire aux bornes FRONT SPEAKERS B. Pour profiter de l'effet Surround Dolby, raccorder les haut-parleurs arrières aux bornes REAR SPEAKERS.

Raccorder les cordons de haut-parleur aux bornes de haut-parleur comme montré dans l'illustration suivante.

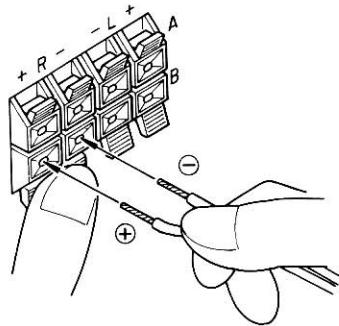

* Appuyer sur le levier, introduire l'extrémité dénudée des fils, puis relâcher le levier pour que les fils soient bien maintenus en place.

Sélecteur d'impédance de haut-parleurs avant (IMPEDANCE SELECTOR)

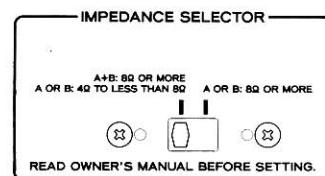

Précautions:

1. Avant de régler ce sélecteur, s'assurer de bien avoir couper l'alimentation.
2. En plus de cette section, se reporter également à "Touches de sélection de haut-parleurs (SPEAKERS)" à la page 35.

Après raccordement des haut-parleurs avant, régler le sélecteur IMPEDANCE SELECTOR selon le tableau ci-dessous.

En utilisant les haut-parleurs A ou B séparément



Impédance des haut-parleurs	Position du sélecteur
4 Ω, 6 Ω	A+B: 8Ω OR MORE A OR B: 4Ω TO LESS THAN 8Ω A OR B: 8Ω OR MORE
8 Ω, 16 Ω	A+B: 8Ω OR MORE A OR B: 4Ω TO LESS THAN 8Ω A OR B: 8Ω OR MORE

En utilisant les haut-parleurs A et B simultanément


Impédance des haut-parleurs	Position du sélecteur
8 Ω, 16 Ω	A+B: 8Ω OR MORE A OR B: 4Ω TO LESS THAN 8Ω A OR B: 8Ω OR MORE

COMMANDES ET INDICATEURS

■ Panneau avant

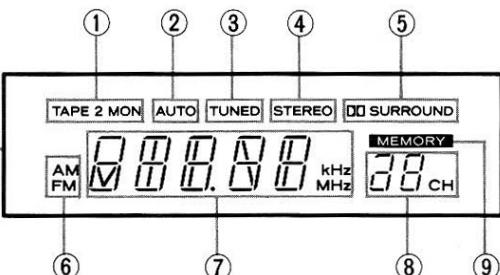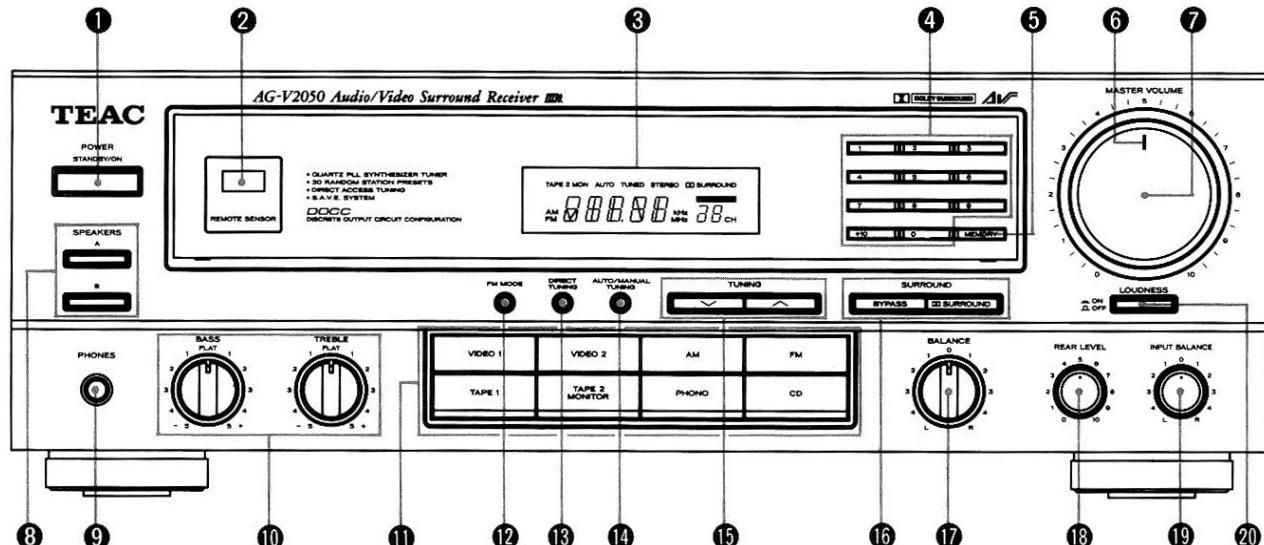

■ Boîtier de télécommande (UR-402)

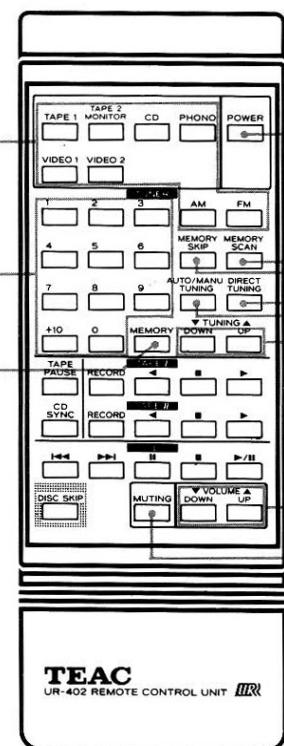

- 1 Touche d'alimentation (POWER)
- 2 Fenêtre de réception du signal infrarouge (REMOTE SENSOR)
- 3 Fenêtre d'affichage à fonctions multiples
- 4 Indicateur TAPE 2 MONITOR
- 5 Indicateur AUTO
- 6 Indicateur TUNED
- 7 Indicateur STEREO
- 8 Indicateur DOLBY SURROUND
- 9 Indicateurs de gamme
- 10 Affichage de la source/fréquence
- 11 Affichage du canal préréglé
- 12 Indicateur MEMORY
- 13 Touches numériques
- 14 Touche de mémoire (MEMORY)
- 15 Indicateur de niveau de volume général (MASTER VOLUME)
- 16 Commande de volume général (MASTER VOLUME) (Touches VOLUME DOWN/UP)
- 17 Touche de sélection de haut-parleurs (SPEAKERS)
- 18 Prise de casque d'écoute (PHONES)
- 19 Commandes BASS et TREBLE
- 20 Touches de sélection de source
- 21 Touche de mode FM (FM MODE)
- 22 Touche DIRECT TUNING
- 23 Touche AUTO/MANU TUNING
- 24 Touche TUNING DOWN/UP
- 25 Touche SURROUND (BYPASS/DD SURROUND)
- 26 Commande BALANCE
- 27 Commande de niveau arrière (REAR LEVEL)
- 28 Commande de balance d'entrée (INPUT BALANCE)
- 29 Commande de contour (LOUDNESS)
- 30 Touche MEMORY SCAN (télécommande seulement)
- 31 Touche MEMORY SKIP (télécommande seulement)
- 32 Touche MUTING (télécommande seulement)

* Pour les touches de la télécommande qui ne sont pas numérotées, se reporter à la page 45.

TELECOMMANDE

En utilisant la télécommande UR-402 fournie, le récepteur AG-V2050 et certains autres appareils TEAC utilisés avec peuvent être commandés à partir de votre position d'écoute.


La télécommande d'autres appareils TEAC en utilisant l'UR-402 est expliquée après, à la page 43.

Piles


Mise en place des piles

1. Retirer le couvercle du compartiment des piles de la télécommande, comme montré dans la figure.


Pousser la languette dans le sens de la flèche ①, puis lever le couvercle ② pour le sortir.

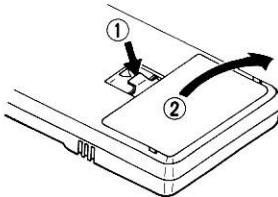

2. Introduire deux piles "SUM-3", "AA" ou "R6"). S'assurer que les piles sont installées avec leurs polarités placées correctement, en suivant les marquages dans le compartiment des piles comme montré ci-dessous.

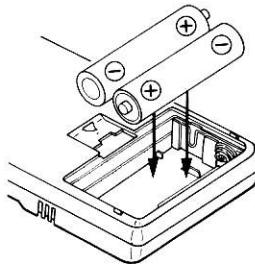

3. Remettre le couvercle. Introduire les deux languettes ① dans les fentes, puis presser le couvercle dans le sens de la flèche ② pour le remettre en place.

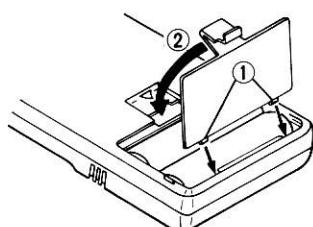

Remplacement des piles


Si vous remarquez que la distance entre la télécommande et le récepteur pour un fonctionnement correct devient plus courte, cela indique que les piles sont presque usées. Dans ce cas, remplacer les deux piles par des nouvelles.

Précautions concernant les piles

- Bien introduire les piles avec les polarités correctes positive (+) et négative (-) comme indiqué dans le compartiment des piles.
- Ne pas utiliser une pile usée avec une pile neuve en même temps.
- Utiliser des piles du même type. Ne jamais utiliser ensemble des piles de types différents, même si elles ont la même forme.
- Des batteries ou des piles peuvent être utilisées. Se reporter aux précautions sur leurs étiquettes avant utilisation.
- Ne jamais chauffer ou démonter des piles et ne jamais jeter des piles usagées au feu, elles pourraient exploser.

Utilisation de la télécommande

Pour utiliser la télécommande UR-402, la diriger vers la fenêtre REMOTE SENSOR du récepteur (ou d'un autre appareil TEAC) dans la gamme montrée.

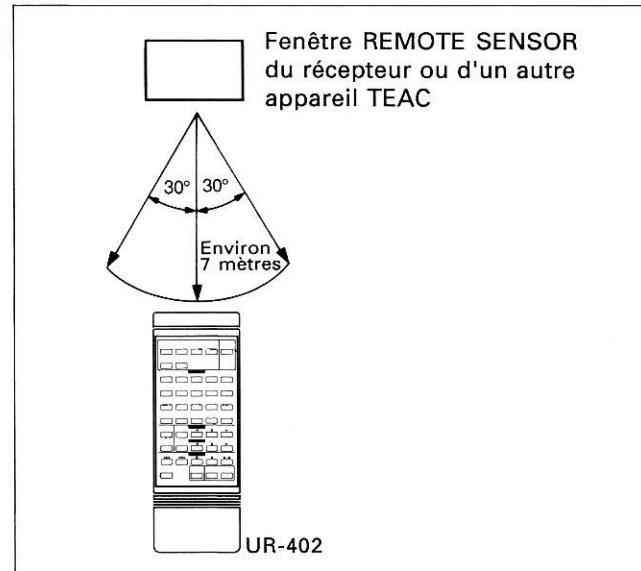

Certaines touches sur l'UR-402 et sur le panneau avant de l'AG-V2050 ont les mêmes ou des fonctions similaires et ont les mêmes numéros de référence à la page 32.

Les touches sans numéros sont pour le fonctionnement d'autres appareils TEAC. Pour ces touches, se reporter à la page 45.

FONCTIONNEMENT


Précautions sur l'utilisation de la télécommande

- Même si la télécommande est utilisée dans la gamme montrée, le fonctionnement télécommandé peut être impossible s'il y a un obstacle entre le récepteur et la télécommande.
- Si vous avez d'autres appareils commandés par des signaux infrarouges dans la même pièce que votre AG-V2050, ils peuvent ne pas fonctionner correctement à cause des signaux de la télécommande. (TEAC ne peut être pris pour responsable de dommages causés par incident ou en conséquence de ce phénomène.) A l'inverse, leurs télécommandes peuvent causer un mauvais fonctionnement de l'AG-V2050.
- Ne pas placer de livres ou d'autres objets sur le boîtier de télécommande. Ils pourraient appuyer sur des touches et user les piles.
- Si la télécommande n'est pas à utiliser pendant plus d'un mois, retirer les piles pour éviter des fuites. Si une fuite a eu lieu, essuyer le liquide dans le compartiment et remplacer les piles par des neuves.

Les instructions suivantes s'appliquent à toutes les sections "FONCTIONNEMENT" sauf indications contraires.


- Pour simplifier les explications, elles utilisent les noms des touches et commandes sur le panneau avant, sans mentionner l'utilisation de la télécommande.
- Bien s'assurer que la touche TAPE 2 MONITOR est réglée sur OFF (l'indicateur TAPE 2 MON n'apparaît pas dans l'affichage).
Cette instruction ne sera plus répétée par la suite.

Fonctionnement de base

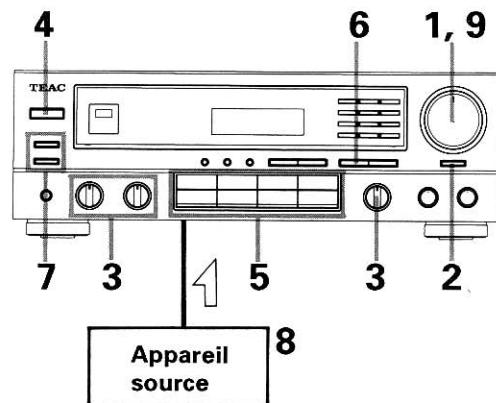

1. Régler la commande MASTER VOLUME sur "0". C'est pour protéger les haut-parleurs d'un signal soudain de haut niveau.
2. Régler la touche LOUDNESS sur la position OFF.
3. Régler les commandes BASS, TREBLE et BALANCE sur leurs positions centrales (à déclic).
4. Appuyer sur la touche POWER pour mettre l'alimentation.
5. Sélectionner la source voulue en appuyant sur une des touches de sélection de source. Pour écouter une source autre que la platine à cassette 2, vérifier que l'indicateur TAPE 2 MON n'est pas montré dans l'affichage; s'il l'est, le commuter en appuyant sur la touche TAPE 2 MONITOR.
6. Appuyer sur la touche BYPASS pour mettre le mode Surround à l'arrêt.
7. Sélectionner les haut-parleurs avant à utiliser avec les touches de sélection SPEAKERS.
8. Lancer la lecture de l'appareil source.
9. Augmenter progressivement le volume avec la commande MASTER VOLUME et ajuster les autres commandes comme requis.

Réglages audio

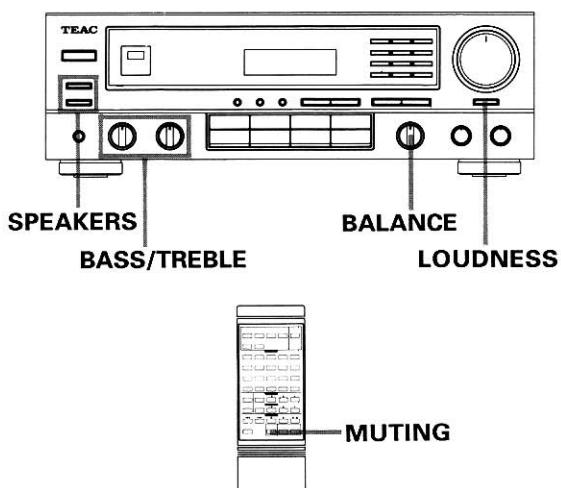

Touches de sélection de haut-parleurs (SPEAKERS)

Lorsque la touche A et/ou B est pressée, le son sera entendu des haut-parleurs raccordés aux bornes SPEAKERS A et/ou B du panneau arrière.

Commandes de tonalité (BASS et TREBLE)

Elles sont utilisées pour relever ou atténuer les fréquences basses et élevées. La réponse sera "plate" avec les commandes dans leurs positions centrales "à déclic".

Commande BALANCE

Elle décale le son vers le haut-parleur de gauche ou de droite.

Touche LOUDNESS


Cette touche compense la réponse non linéaire de l'oreille humaine à faibles niveaux. Régler ce commutateur sur la position OFF en écoutant à des niveaux normaux.

Touche MUTING (sur la télécommande)

La presser pour rendre silencieux le son des haut-parleurs et du casque, pour répondre au téléphone, etc. Pour revenir au volume original, appuyer à nouveau sur la touche MUTING. Alors que le silencieux est engagé, l'indicateur de niveau MASTER VOLUME clignotera.

Réception de la radio

Syntonisation automatique

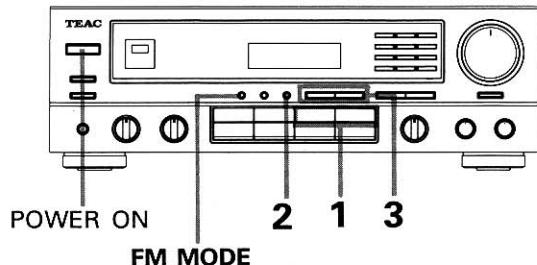

1. Sélectionner AM ou FM.
2. S'assurer que l'indicateur AUTO apparaît dans l'affichage. Si ce n'est pas le cas, appuyer sur la touche AUTO/MANUAL TUNING.
Remarque: Quand l'alimentation est mise, le récepteur est réglé automatiquement en mode de syntonisation automatique.
3. Appuyer sur la touche UP ou DOWN TUNING. La station suivante diffusant sur une fréquence plus élevée ou plus faible est automatiquement détectée et syntonisée. L'indicateur TUNED apparaît dans l'affichage pour indiquer que le récepteur est correctement syntonisé sur une émission.

Touche FM MODE

Cette touche est utilisée pour alterner la réception FM entre stéréo et mono.

• Stéréo

Pour recevoir des émissions FM en stéréo, appuyer sur cette touche pour passer en mode stéréo (ainsi l'indicateur STEREO s'allume).


• Mono

Si cette touche est pressée à nouveau tout en recevant une émission FM dans le mode stéréo, l'indicateur STEREO s'éteint et l'émission FM sera reçue en mono. Il peut être difficile d'entendre clairement des émissions stéréo dans des régions où les signaux sont faibles et la réception est bruitée; dans un tel cas, utiliser le mode mono pour réduire le bruit.

Remarque: Quand l'alimentation est mise ou si la gamme de réception est changée, l'appareil est automatiquement mis en mode stéréo.

Syntonisation manuelle

Le mode de syntonisation manuelle est généralement utilisé pour syntoniser des stations diffusant un signal trop faible pour être reçues par la syntonisation automatique.

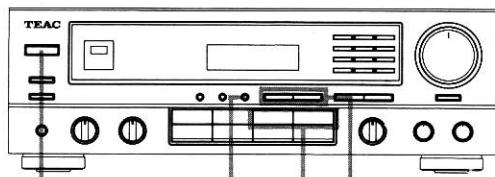

POWER ON

2

1

3

1. Sélectionner AM ou FM.
2. Appuyer sur la touche AUTO/MANUAL TUNING pour que l'indicateur AUTO n'apparaisse pas dans l'affichage.
3. Lorsque la touche UP ou DOWN TUNING est pressée momentanément, la fréquence est changée d'un palier fixe (voir PALIERS ci-dessous). Si la touche de syntonisation est maintenue pressée pendant plus de 0,5 seconde, la fréquence change en continu jusqu'au relâchement de la touche.

PALIERS

Modèles pour Etats-Unis/Canada

FM: paliers de 100 kHz

AM: paliers de 10 kHz


Modèles pour Europe/Exportation générale

FM: paliers de 50 kHz

AM: paliers de 9 kHz

Syntonisation directe

Avec cette méthode, la fréquence voulue est entrée directement en utilisant les touches numériques.

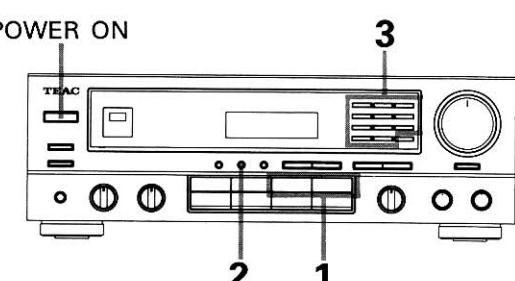

POWER ON

2

1

3


1. Sélectionner AM ou FM.
2. Appuyer sur la touche DIRECT TUNING; “-” clignotera dans l'affichage.
3. Entrer la fréquence de l'émission que vous voulez entendre avec les touches numériques.

Modèles pour Etats-Unis/Canada


FM: paliers de 100 kHz

AM: paliers de 10 kHz

Ex.: FM 87,7 MHz

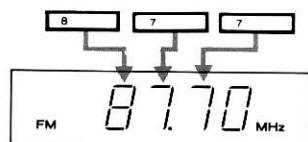

Ex.: AM 780 kHz

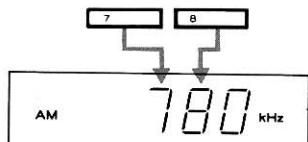

Remarque:


En entrant la fréquence, le dernier chiffre n'a pas besoin d'être entré, il est toujours égal à "0".

Modèles pour Europe/Exportation générale


FM: paliers de 50 kHz

AM: paliers de 9 kHz

Ex.: FM 107,55 MHz

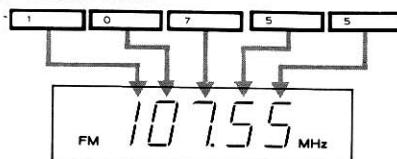

Ex.: AM 1008 kHz

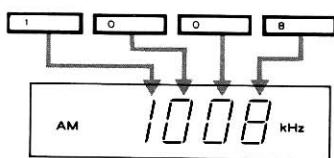

Remarque:


Si la fréquence entrée est comme suit, la fréquence clignotera pendant plusieurs secondes, puis la fréquence précédente apparaîtra à nouveau dans l'affichage.

- Ne correspond pas aux paliers de syntonisation fixés dans chaque gamme (Modèles Europe/Exportation générale).
- En dehors de la gamme de fréquence recevable.

Syntonisation prérglée

L'AG-V2050 dispose d'une mémoire de prérglage. Si des fréquences d'émissions sont mises dans cette mémoire qui a une capacité de 30 stations (canaux), elles peuvent être syntonisées par une procédure simplifiée.

■ Préréglage

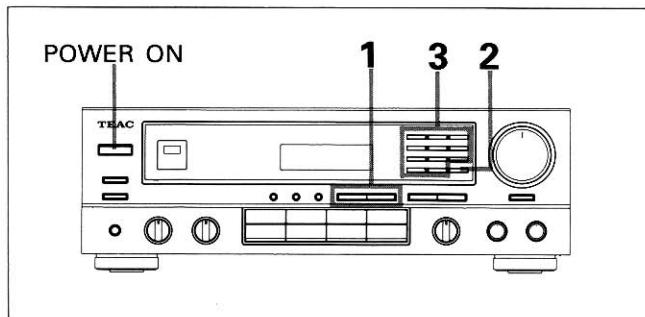


1. Syntoniser une station en utilisant le mode de syntonisation automatique, manuelle ou directe.
2. Appuyer sur la touche MEMORY; l'indicateur MEMORY s'allumera dans l'affichage pour environ 5 secondes.
3. Alors que l'indicateur MEMORY est allumé, appuyer sur les touches numériques pour entrer le numéro de canal sous lequel les informations (gamme FM ou AM et fréquence) pour l'émission sont mises en mémoire.


Remarque:

Si une fréquence a déjà été rangée dans le canal de préréglage spécifié, la fréquence stockée précédemment sera remplacée par la nouvelle fréquence.


Ex.: Canal 1

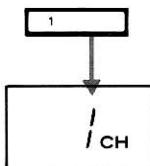


Ex.: Canal 10

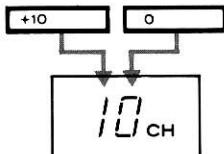

Ex.: Canal 20

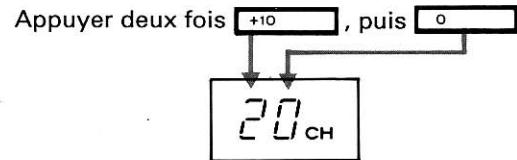

Ex.: Canal 30

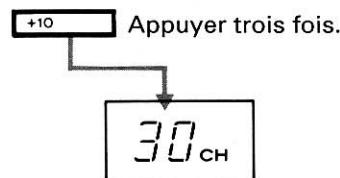

Remarque:

Il n'est pas nécessaire d'appuyer sur la touche "0" pour entrer le chiffre des unités.

4. Pour relâcher la fonction mémoire alors que l'indicateur MEMORY apparaît dans l'affichage, appuyer à nouveau sur la touche MEMORY.

■ Rappel des fréquences

Appuyer sur les touches numériques correspondant au numéro de canal, pour syntoniser directement une émission.


■ Utilisation de la fonction de balayage de la mémoire

Quand la touche MEMORY SCAN (sur la télécommande) est pressée, les canaux prérégisés dans lesquels des fréquences dans la gamme (AM ou FM) sélectionnée ont été mémorisées seront balayés à des intervalles de 5 secondes. Quand vous entendez l'émission que vous voulez écouter, relâcher cette fonction en appuyant à nouveau sur la touche MEMORY SCAN.

■ Utilisation de la fonction de saut mémoire


Chaque fois que la touche MEMORY SKIP (sur la télécommande) est pressée, la syntonisation passe au canal suivant prérégisé plus élevé mis en mémoire pour la gamme sélectionnée.

Ecoute de disques ou de disques audionumériques

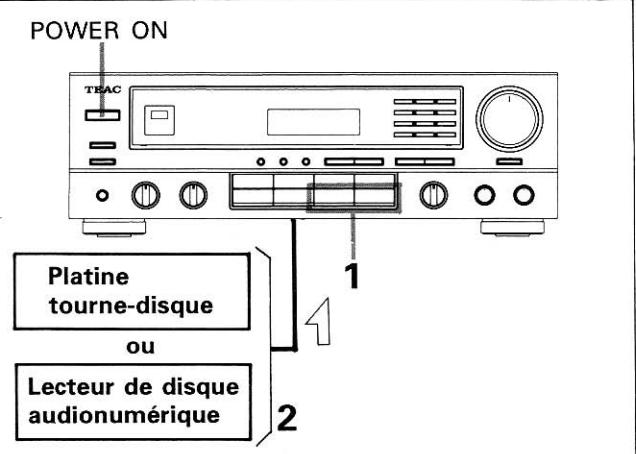

1. Appuyer sur la touche PHONO ou CD.
2. Faire fonctionner la platine tourne-disque (avec une cartouche à aimant mobile) ou le lecteur de disque audionumérique.

Lecture de cassettes

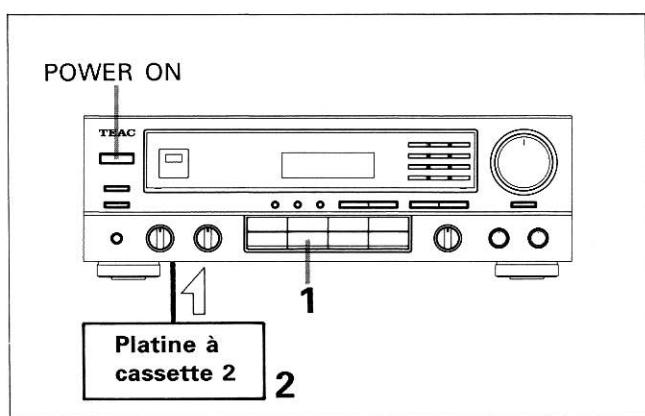

Remarque:

Si deux platines à cassette TEAC sont utilisées dans la chaîne, l'utilisation de la télécommande UR-402 peut faire fonctionner les deux platines simultanément.

1. Placer la touche TAPE 2 MONITOR sur ON; l'indicateur TAPE 2 MON apparaîtra dans l'affichage.
2. Faire fonctionner la platine à cassette 2 pour la lecture.

■ Lecture de la platine à cassette 1


Pour la lecture en utilisant la platine à cassette 1, régler la touche TAPE 2 MONITOR sur OFF puis appuyer sur la touche TAPE 1. Puis faire fonctionner la platine à cassette 1 pour la lecture.

Enregistrement de cassettes

Remarque:

Si deux platines à cassette TEAC sont utilisées dans la chaîne, l'utilisation de la télécommande UR-402 peut faire fonctionner les deux platines simultanément.

Enregistrement d'une source autre qu'une bande

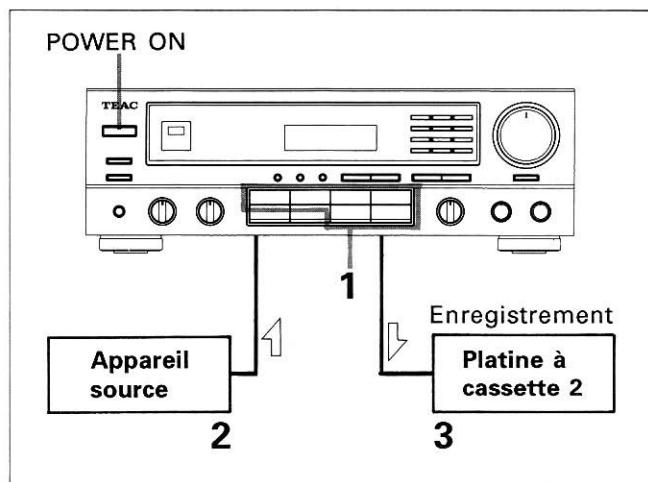

1. S'assurer que la touche TAPE 2 MONITOR est réglée sur OFF, puis appuyer sur la touche de sélection de source correspondant à la source à enregistrer.
2. Lire la source.
3. Faire fonctionner la platine à cassette 2 pour l'enregistrement.


■ Contrôle de l'enregistrement

Si la platine à cassette 2 a des têtes d'enregistrement et de lecture séparées, le son enregistré peut être entendu, pendant l'enregistrement, à partir des haut-parleurs avec la touche TAPE 2 MONITOR réglée sur ON.

■ Enregistrement simultané

Une source unique peut être enregistrée simultanément par les platines à cassette 1 et 2. Pour faire cela, après l'étape 2 ci-dessus, faire fonctionner les deux platines pour l'enregistrement.

Copie de bande (de la platine 1 vers la platine 2)

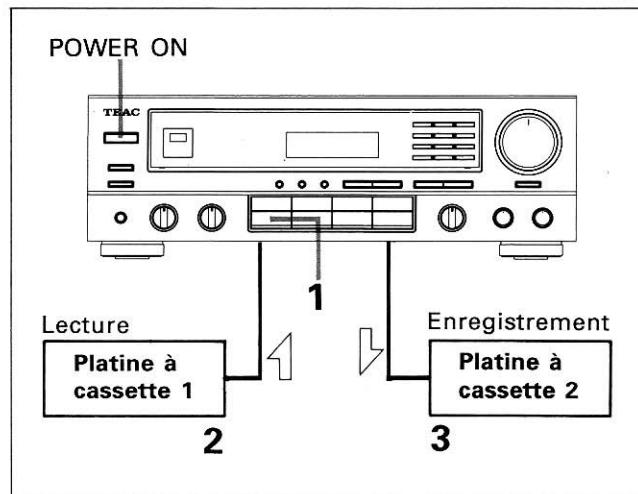

1. S'assurer que la touche TAPE 2 MONITOR est réglée sur OFF, puis appuyer sur la touche TAPE 1.
2. Faire la lecture sur la platine à cassette 1.
3. Faire fonctionner la platine à cassette 2 pour l'enregistrement.

■ Contrôle de l'enregistrement


Si la platine à cassette 2 (la platine utilisée pour l'enregistrement) a des têtes d'enregistrement et de lecture séparées, le son enregistré peut être entendu, pendant la copie, à partir des haut-parleurs avec la touche TAPE 2 MONITOR réglée sur ON.

■ Copie bande 2 sur bande 1

En plus de la copie de la bande 1 sur la bande 2 décrite ci-dessus, la copie à partir de la bande 2 sur la bande 1 est également possible.

Pour faire ceci, effectuer la suite: appuyer sur toute touche de sélection de source autre que TAPE 1. Régler la touche TAPE 2 MONITOR sur ON. Faire la lecture sur la platine à cassette 2. Faire fonctionner la platine à cassette 1 pour l'enregistrement.


Lecture de sources vidéo

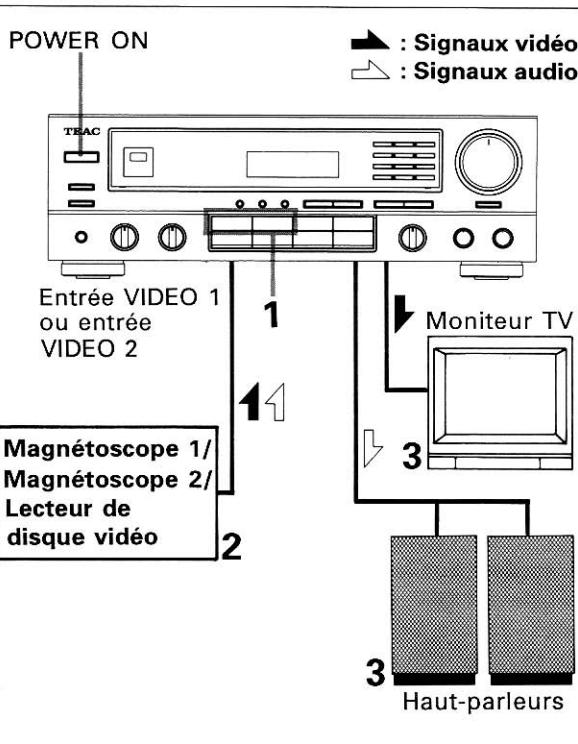

1. Appuyer sur la touche VIDEO 1 ou VIDEO 2.
2. Lire la source vidéo correspondant à la touche sélectionnée.
3. L'image de la source vidéo peut être vue sur le téléviseur et le son de la source vidéo peut être écouté à partir des haut-parleurs.

Enregistrement avec une platine vidéo


Copie de bande vidéo

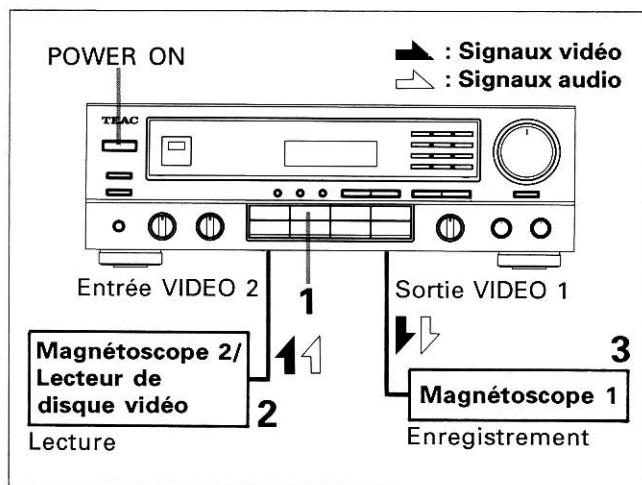

1. Appuyer sur la touche VIDEO 2 avec la touche TAPE 2 MONITOR réglée sur OFF.
2. Faire fonctionner le magnétoscope 2/lecteur de disque vidéo pour la lecture.
3. Faire fonctionner le magnétoscope 1 pour l'enregistrement. De cette façon, les signaux vidéo/audio du magnétoscope 2/lecteur de disque vidéo peuvent être copiés sur le magnétoscope 1.

Fonction S.A.V.E (Second Audio Source for Video Editing) SYSTEM

Cette fonction vous permet de remplacer le son d'un magnétoscope ou d'un lecteur de disque vidéo par le son d'une source AUDIO tel un lecteur CD pendant la copie du signal vidéo.

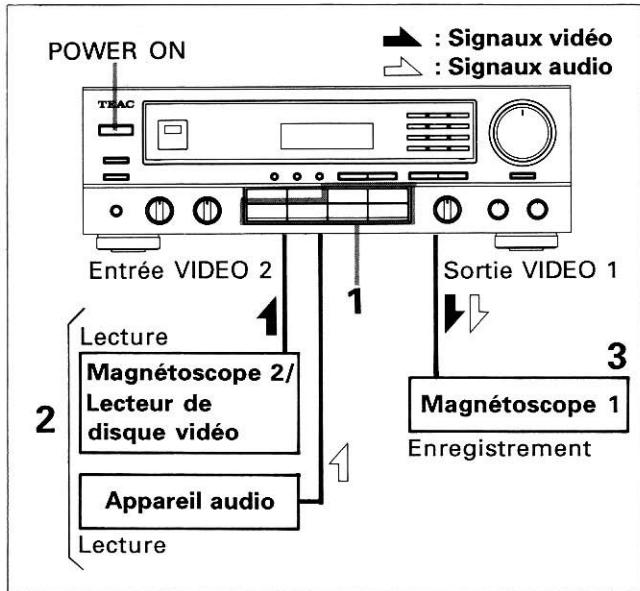

1. Sélectionner la source audio avec les touches de sélection de source.
Remarque:
Les signaux vidéo du magnétoscope 2/lecteur de disque vidéo peuvent toujours être copiés sur le magnétoscope 1, quels que soient les réglages des touches de sélection de source, etc.
2. Faire fonctionner le magnétoscope 2/lecteur de disque vidéo et l'appareil audio sélectionné pour la lecture.
3. Faire fonctionner le magnétoscope 1 pour l'enregistrement. De cette façon, le fonctionnement S.A.V.E. sera effectué.

Effet DOLBY SURROUND


Ce mode vous permet de profiter de cassettes vidéo, de disques vidéo et d'autres sources codées avec des informations Dolby Surround.

Cet appareil incorpore un circuit décodeur Dolby Surround pour reproduire précisément les informations originales enregistrées, pour créer une sensation réelle de présence, comme dans une salle de cinéma.

Seuls certains types de son seront entendus des haut-parleurs arrières en lisant un programme vidéo telle une bande vidéo portant la marque "DOLBY SURROUND". Par exemple, une voiture ou un avion, se déplaçant de l'avant vers l'arrière, ou des effets musicaux ou sonores. Le dialogue principal et l'action "sur l'écran" seront entendus avec les haut-parleurs avant. Le producteur de chaque film détermine la façon d'enregistrer le son.


Fabriqué sous licence de Dolby Laboratories Licensing Corporation. Licences supplémentaires sous un ou plusieurs des brevets suivants: Numéros Etats-Unis 3.632.886, 3.746.792 et 3.959.590; Numéros Canada 1.004.603 et 1.037.877. "Dolby" et symbole double D sont des marques de Dolby Laboratories Licensing Corporation.

Installation des haut-parleurs

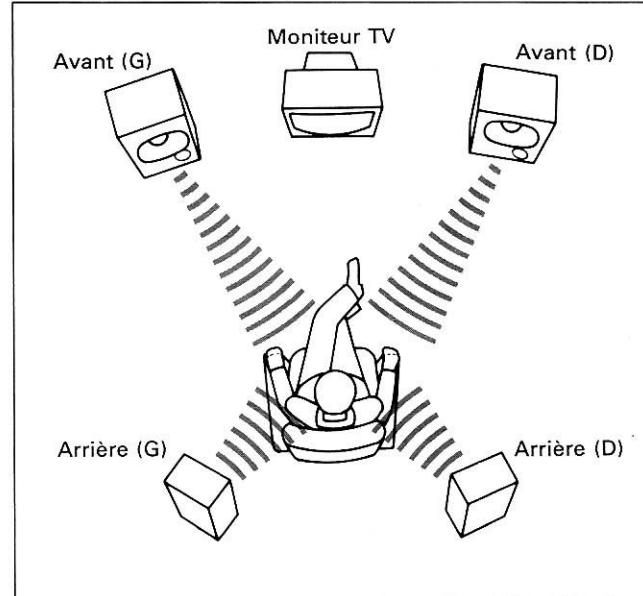

FONCTION DE SOUTIEN DE LA MEMOIRE

Lecture de son DOLBY SURROUND

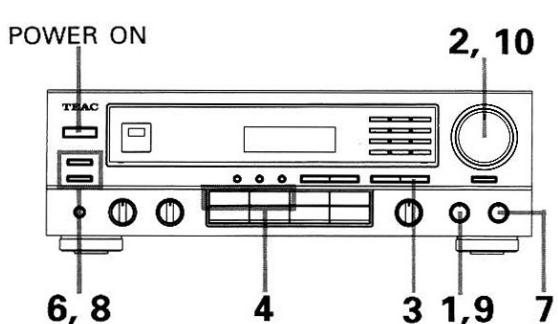

1. Régler la commande REAR LEVEL sur le niveau maximum.
2. Régler la commande MASTER VOLUME sur le niveau d'écoute normal.
3. Appuyer sur la touche DOLBY SURROUND.
4. Lire le programme vidéo avec la marque **DOLBY SURROUND**.
5. Lire une scène avec un son monophonique, tel un dialogue dans le programme vidéo, pas une scène d'action.
6. Régler les haut-parleurs avant sur OFF en utilisant les touches de sélection SPEAKERS.
7. Ajuster la commande INPUT BALANCE entre les entrées gauche et droite pour que le dialogue des haut-parleurs arrières soit à son plus faible.
(Normalement la commande INPUT BALANCE est réglée sur la position centrale.)
8. Régler les haut-parleurs avant sur ON en utilisant les touches de sélection SPEAKERS.
9. Ajuster la commande REAR LEVEL pour équilibrer les volumes relatifs des haut-parleurs avant et des haut-parleurs arrières.
10. Ajuster la commande MASTER VOLUME pour le volume général le plus convenable.

■ Pour relâcher le mode DOLBY SURROUND Appuyer sur la touche BYPASS.


Tant que le cordon secteur est branché à une prise de courant, les mémoires de préréglage de station (déesrites à la page 37) et les items suivants réglés avant la coupure de l'alimentation de l'appareil sont maintenus indéfiniment.

Ces items sont également maintenus pendant environ 4 heures même si le cordon d'alimentation est débranché de la prise de courant.

Réglages des touches de sélection de source
Fréquence de réception
Gamme de réception
Numéro de canal préréglé
Mode DOLBY SURROUND

FONCTIONNEMENT TELECOMMANDE D'UNE CHAINE TEAC

En utilisant un lecteur CD et une platine à cassette avec une fenêtre REMOTE SENSOR

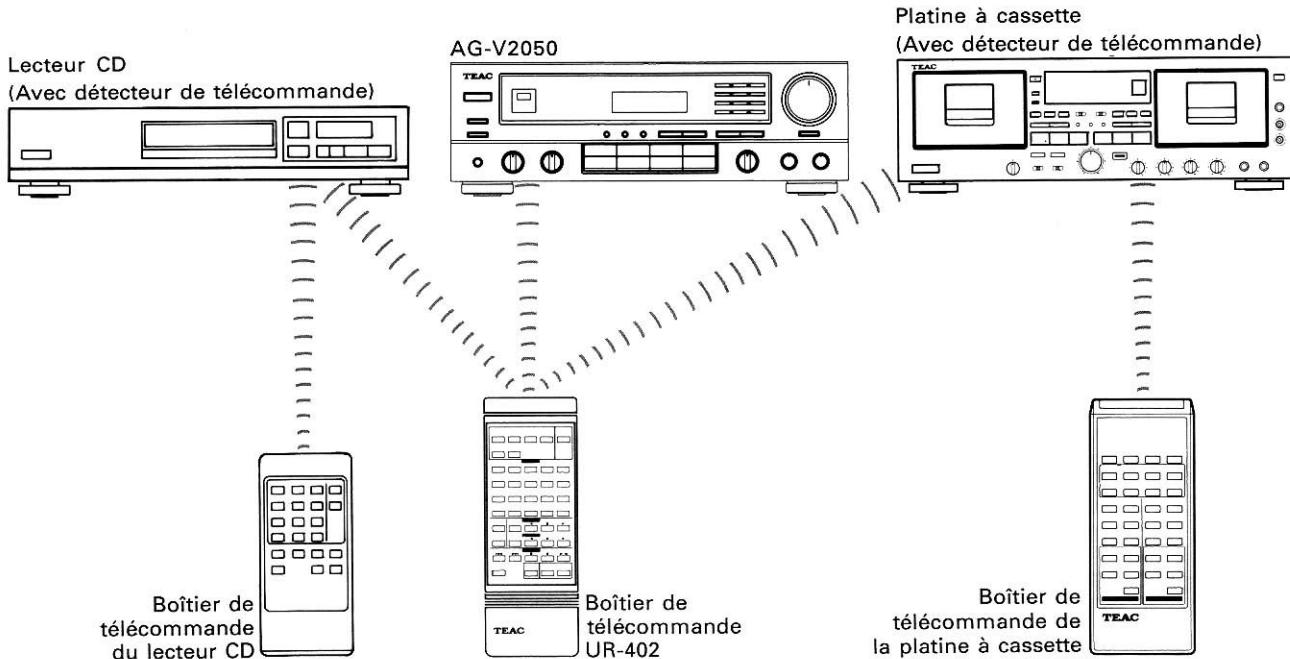

Comme montré, si d'autres appareils TEAC ont des fenêtres REMOTE SENSOR, le boîtier de télécommande UR-402 fourni peut télécommander directement le fonctionnement de ces autres appareils, en plus de la télécommande du récepteur AG-V2050. Si les autres appareils nécessitent des opérations au delà de celles de base offertes par l'UR-402, utiliser les boîtiers de télécommande fournis avec les appareils.


Remarque:

Les lecteurs CD suivants ne peuvent pas être directement commandés en utilisant la télécommande UR-402.


Pour les commander en utilisant l'UR-402, raccorder l'AG-V2050 aux lecteurs CD en utilisant le câble de télécommande (en option), puis utiliser l'UR-402 en la dirigeant vers l'AG-V2050.

Modèles concernés:

CD-P250, CD-P280, ED-570, PD-435, PD-485, PD-495 et PD-555.

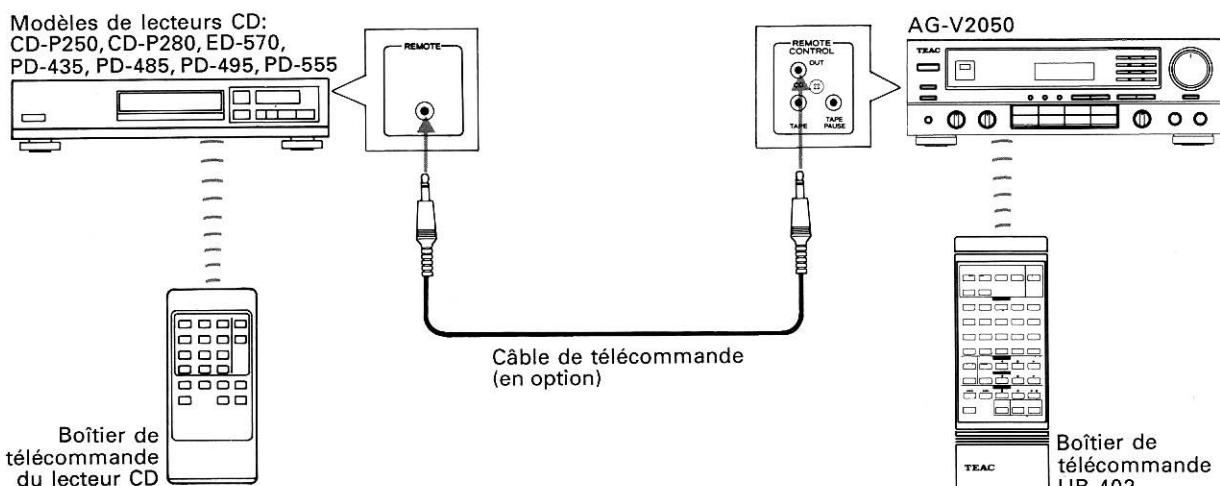


En utilisant une platine à cassette sans fenêtre REMOTE SENSOR

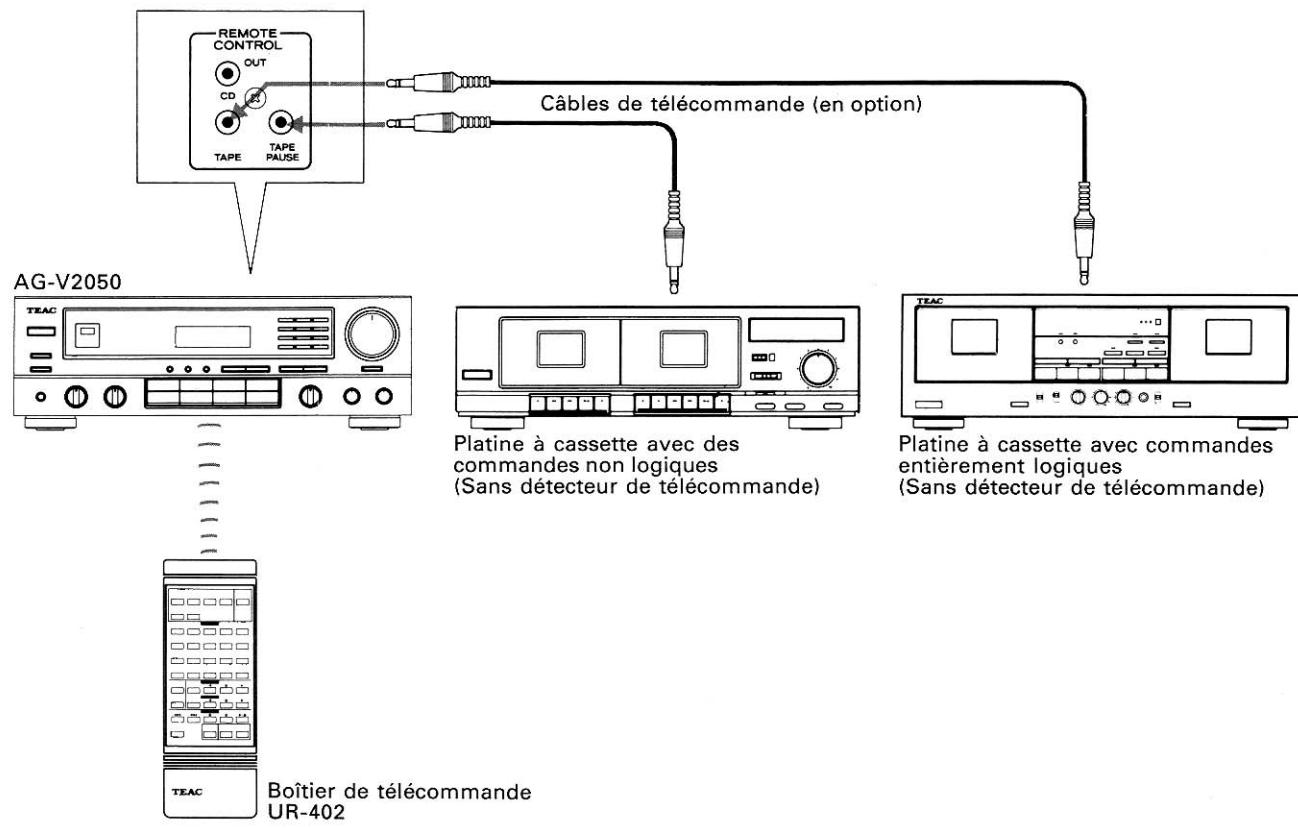

L'illustration montre une chaîne utilisant des platines à cassette UR (à télécommande unifiée) sans fenêtre REMOTE SENSOR. Lorsqu'une platine à commandes entièrement logiques est raccordée au récepteur AG-V2050 en utilisant un câble de télécommande (disponible en option), ses opérations de base sont télécommandées en utilisant le boîtier de télécommande UR-402. Lorsqu'une platine avec des commandes non logiques est raccordée, seul le mode de pause peut être télécommandé.

Touches pour le fonctionnement d'autres appareils TEAC

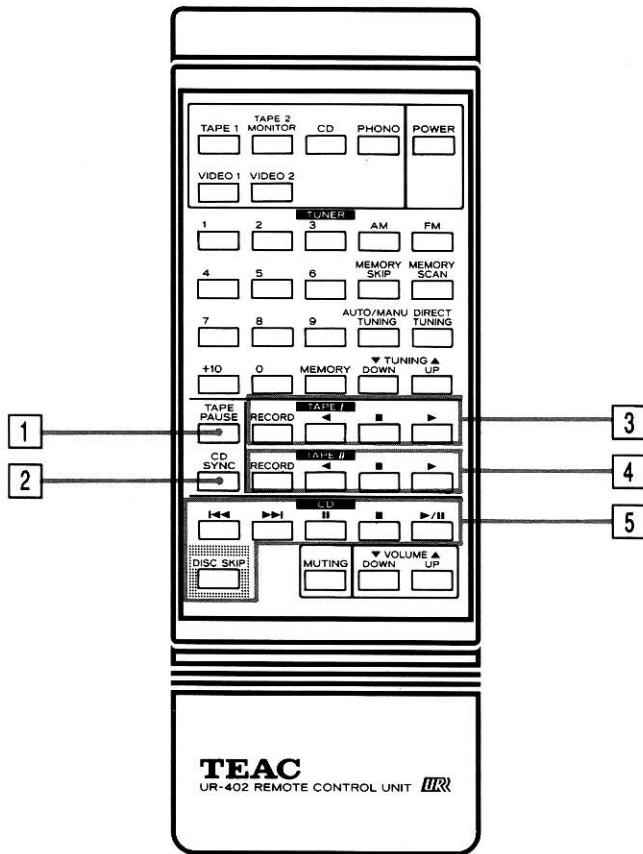

Boîtier de télécommande (UR-402)

Remarque:

Ne pas confondre "TAPE I" comme décrit dans cette section et "TAPE 1" qui signifie la platine à cassette raccordée aux bornes TAPE 1.

La même chose s'applique également à "TAPE II" et "TAPE 2".

1 Touche TAPE PAUSE

Peut seulement être utilisée avec des platines à cassette avec des commandes non logiques. Appuyer une fois pour régler la platine à cassette en mode de pause; appuyer à nouveau pour repartir.

2 Touche CD SYNC

Lorsque l'AG-V2050 est utilisé dans une chaîne avec un lecteur CD TEAC et une platine à cassette TEAC (avec des commandes entièrement logiques), il est possible de synchroniser les opérations du lecteur CD et de la platine à cassette, ainsi ils peuvent être lancés exactement en même temps, pour copier un disque audionumérique sur une cassette.

Dans cette configuration, la borne CD/DECK SYNC du lecteur CD et la borne CD/DECK SYNC de la platine à cassette doivent être raccordées en utilisant le câble synchro WR-7000 en option (bien noter que c'est différent du câble de télécommande en option).

Le fonctionnement synchronisé du lecteur CD et de la platine à cassette peut être lancé en appuyant soit sur la touche CD SYNC du boîtier de télécommande ou de la platine à cassette

3 Touches TAPE I

Le mécanisme TAPE I d'une platine à cassette à double transport avec commandes entièrement logiques peut être commandé en utilisant ces touches.

Remarques:

- Pour lancer l'enregistrement, appuyer simplement sur la touche RECORD; elle n'a pas besoin d'être pressée avec la touche PLAY.
- Si le mécanisme TAPE I d'une platine à cassette à double transport n'a pas de fonction d'enregistrement, la touche TAPE I RECORD n'a pas d'effet.

4 Touches TAPE II

Le mécanisme TAPE II d'une platine à cassette à double transport avec commandes entièrement logiques peut être commandé en utilisant ces touches. Elles sont également utilisées pour commander une platine à cassette à transport simple avec commandes entièrement logiques.

Remarque:

- Pour lancer l'enregistrement, appuyer simplement sur la touche RECORD; elle n'a pas besoin d'être pressée avec la touche PLAY.

5 Touches CD

- **Touches SKIP (◀◀, ▶▶)** : A chaque pression sur ces touches, le capteur se déplace au début du morceau suivant dans le sens avant ou inverse. Maintenues pressées, le saut continue jusqu'au relâchement de la touche.
- **Touches PAUSE (■), PLAY/PAUSE (▶/■)** : Pour arrêter momentanément la lecture CD, appuyer sur la touche PAUSE si le lecteur CD a une touche PLAY/PAUSE indépendante, appuyer sur la touche PLAY/PAUSE s'il a une touche PLAY/PAUSE.
- **Touche STOP (■)** : Appuyer pour arrêter le lecteur CD.
- **Touche DISC SKIP** : Sélectionne le disque suivant dans un changeur automatique.

EN CAS DE DIFFICULTES

Pour déterminer tout problème avec votre récepteur, toujours vérifier les causes les plus probables en premier. Si le problème persiste même après avoir vérifier les items suivants, consulter votre revendeur TEAC le plus proche.

Problème	Cause probable	Remède
Alimentation		
Pas d'alimentation	Le cordon d'alimentation n'est pas branché.	Brancher correctement le cordon d'alimentation.
Amplificateur		
Le son ne peut pas être entendu.	<p>La touche de sélection de haut-parleur (SPEAKERS) requise n'est pas sur ON.</p> <p>La touche de silencieux (MUTING) est réglée sur ON.</p> <p>La touche TAPE 2 MONITOR est sur ON.</p>	<p>Régler la touche de sélection de haut-parleur requise sur ON.</p> <p>Bien régler la commande MASTER VOLUME sur le minimum puis régler la touche de silencieux sur OFF.</p> <p>Régler la touche TAPE 2 MONITOR sur OFF.</p>
Le son est entendu de seulement un canal.	La commande BALANCE est réglée sur une extrémité.	Régler la commande de balance.
Pas de son des haut-parleurs arrières.	<p>La touche SURROUND est réglée sur BYPASS.</p> <p>Si le réglage de MASTER VOLUME est à bas niveau, le volume des haut-parleurs arrières devient encore plus faible.</p>	<p>Appuyer sur la touche DOLBY SURROUND.</p> <p>Augmenter le niveau du volume des haut-parleurs arrières en utilisant la commande REAR LEVEL.</p>
Les fréquences graves sont insuffisantes et l'image des fréquences médiums n'est pas fixe.	Les raccordements plus et moins d'un des haut-parleurs sont inversés.	Raccorder les haut-parleurs avec la bonne polarité.
Bourdonnement ou bruit.	<p>La platine tourne-disque n'est pas mise à la masse.</p> <p>Le matériel audio est trop près du téléviseur.</p>	<p>Raccorder le fil de masse à la borne GND sur le panneau arrière.</p> <p>Eloigner le téléviseur du matériel audio.</p>
Syntoniseur		
Pas de syntonisation.	L'antenne n'est pas raccordée.	Raccorder l'antenne.
La syntonisation automatique n'est pas possible.	Le signal des stations est trop faible.	<p>Effectuer la syntonisation manuelle ou la syntonisation directe.</p> <p>Utiliser une meilleure antenne extérieure et régler son orientation.</p>
L'indicateur STEREO ne s'allume pas avec des émissions stéréo.	La touche FM MODE est réglée sur le mode Mono.	Régler la touche FM MODE sur le mode Stéréo.
Interférence électromagnétique	<p>Parasites d'allumage des automobiles.</p> <p>Le téléviseur est trop près du récepteur.</p>	<p>Utiliser une antenne extérieure et l'installer loin de la route.</p> <p>Eloigner le récepteur du téléviseur.</p>
Télécommande		
La télécommande est impossible.	Les piles sont usées.	Les remplacer par des neuves.
	Le boîtier de télécommande est trop loin du récepteur ou en dehors de la gamme utilisable.	Faire fonctionner le boîtier de télécommande dans la gamme utilisable.

Attention:

Comme le récepteur incorpore un microprocesseur, il peut ne pas fonctionner correctement à cause de parasites externes, etc. Dans un tel cas, débrancher le cordon secteur de la prise de courant, et attendre environ dix secondes avant de le remettre en marche pour reprendre les opérations.

CARACTÉRISTIQUES TECHNIQUES

Section Amplificateur

Puissance de sortie (Avant):

Règle F.T.C.:

100 watts RMS par canal minimum, les deux canaux pilotés sous 8 ohms de 20 Hz à 20 kHz avec pas plus de 0,07% de distorsion harmonique totale (Etats-Unis/Canada)

Puissance RMS (20 Hz à 20 kHz):

75 watts/8 ohms, 0,07% (Europe)

104 watts/8 ohms, 0,07% (Exportation générale)

Puissance DIN: 80 watts/8 ohms (Europe)

Puissance de sortie (Arrière):

35 watts (0,9% THD, 1 kHz)

Distorsion harmonique totale (Avant):

0,01% (à 100 watts, 1 kHz)

Distorsion d'intermodulation (Avant):

0,02% (à 100 watts)

Durée de retard:

DOLBY SURROUND: 20 ms

Sensibilité/impédance d'entrée:

PHONO: 2,5 mV/47 kohms

LINE*: 200 mV/47 kohms

Réponse en fréquence:

PHONO: 30 Hz à 20 kHz, ± 1 dB

LINE*: 10 Hz à 60 kHz, -3 dB

Rapport signal/bruit:

PHONO: 70 dB

LINE*: 76 dB

Commande de tonalité:

Grave: ± 10 dB à 100 Hz

Aigu: ± 10 dB à 10 kHz

Section Tuner FM

Gamme de syntonisation:

87,5 MHz à 108,0 MHz (pas de 100 kHz)

(Etats-Unis/Canada)

87,5 MHz à 108,0 MHz (pas de 50 kHz)

(Europe/Exportation générale)

Sensibilité utilisable (IHF):

Mono: 13,2 dBf

(Etats-Unis/Canada/Exportation générale)

Mono: 16,2 dBf (Europe)

Seuil de sensibilité 50 dB:

Mono: 18 dBf

(Etats-Unis/Canada/Exportation générale)

Mono: 20 dBf (Europe)

Stéréo: 38 dBf

(Etats-Unis/Canada/Exportation générale)

Stéréo: 42 dBf (Europe)

Rapport de capture:

2,0 dB (Etats-Unis/Canada/Exportation générale)

2,5 dB (Europe)

Taux de réjection image:

40 dB (Etats-Unis/Canada/Exportation générale)

80 dB (Europe)

Suppression AM: 60 dB

Intermodulation RF: 65 dB

Distorsion harmonique totale (1 kHz):

Mono: 0,4%

Stéréo: 0,5%

Réponse en fréquence: 30 Hz à 15 kHz, +1/-1,5 dB

Séparation stéréo (1 kHz): 43 dB

Rapport signal/bruit:

Mono: 76 dB

Stéréo: 70 dB

Section Tuner AM

Gamme de syntonisation:

530 kHz à 1.710 kHz (pas de 10 kHz)

(Etats-Unis/Canada)

522 kHz à 1.611 kHz (pas de 9 kHz)

(Europe/Exportation générale)

Sensibilité utilisable: 52 dB/m

Distorsion harmonique totale: 0,8% à 85 dB/m

Rapport signal/bruit: 45 dB à 85 dB/m

Section Vidéo

Sensibilité/impédance d'entrée: 1,0 Vcc/75 ohms

Niveau/impédance de sortie: 1,0 Vcc/75 ohms

Réponse en fréquence: 5 Hz à 6 MHz, -3 dB

Rapport signal/bruit: 60 dB (1 kHz, HPF IN)

Générales

Alimentation:

120 V CA, 60 Hz (Etats-Unis/Canada)

230 V CA, 50 Hz (Europe)

115/230 V CA, 50-60 Hz (Exportation générale)

Consommation:

2,5 A (Etats-Unis/Canada)

420 W (Europe)

585 W (Exportation générale)

Prise CA:

Commutée × 2, Total 100 W max. (1 A max.)

(Etats-Unis/Canada)

Commutée × 1, 100 W max.

(Europe/Exportation générale)

Dimensions (LxHxP):

435 × 149 × 350 mm

Poids (net): 10 kg

Accessoires standard:

Antenne cadre AM × 1

Antenne FM en "T" × 1

Boîtier de télécommande (UR-402) × 1

Pile ("AA", "R6", SUM-3) × 2

Transformateur d'adaptation (pour conversion 300 ohms en 75 ohms) × 1 (Europe)

Adaptateur de fiche CA × 1 (Exportation générale)

* LINE signifie CD, VIDEO 1, VIDEO 2, TAPE 1 et TAPE 2.

● Des améliorations peuvent apporter des changements dans les caractéristiques techniques et générales sans préavis.

● Les photos et illustrations peuvent légèrement différer des modèles produits.